



# SERVICE MANUAL

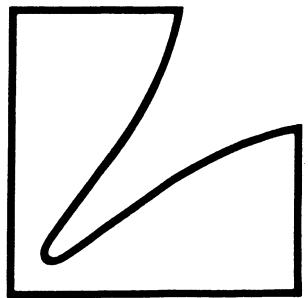

FREQUENCY SYNTHESIZED  
AM/FM TUNER-AMPLIFIER **R-5045**

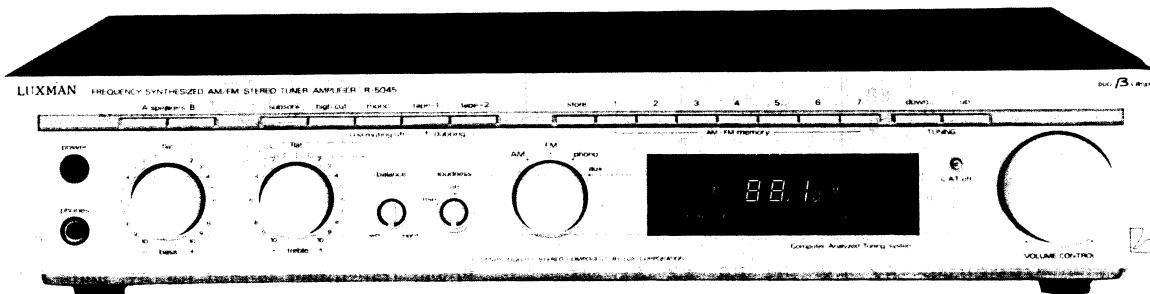

# CONTENTS

SWITCHES & CONTROLS .....	1	
ALIGNMENT PROCEDURES .....	2	
SEP-UP UNIT .....	3	
BLOCK DIAGRAM .....	5	
TC4016P (TC5027) -Quad Bilateral Switch .....	6	
$\mu$ PB533AC (TC5033)-Prescaler .....	6	
$\mu$ PD1703C (TC0194)-PLL Synthesizer and Control .....	7	
REPLACEMENT PARTS .....	8	
Parts List .....	Cosmetic, Switch, other .....	9
P.C.B. parts list .....	10	
R-5045 AUDIO SECTION .....	19	
R-5045 RF, EQ SECTION .....	20	
Specification .....	21	

**NOTE:** In this service manual the parts which differ depending on destination are described by each symbol indicating its version in the under-mentioned table.

VERSION		SAFETY REGULATION	RADIATION	AC MAINS VOLTAGE	MAINS PLUG	REGION
J		Denki Yoohin Torishimari Hoo	Denki Yoohin Torishimari Hoo	100 V		Japan
Z	UC	CSA	FCC	120 V		Canada
	UZ	LA (UL)				USA
	EZ					North America, Asia
C	AZ					South America
	EK		P & T Other	220 V		Europe, Asia South America
K	SK	SEMKO				
	AK	DEMKO NEMKO				
D	SD	(SEMKO) (DEMKO) (NEMKO)	FTZ	220 V		West Germany (Europe)
G	EG SG AG	(BS) (SAA)		240 V		England Oceania
B	EB SB	(SAA)		240 V		Australia
F		Other				

**VERSION:** EZ, EK, EG, EB, AZ, AK, AG ----- Power transformer tapped for AC main 100V, 120V, 220V, 240V.



UP, UQ ----- Basically these are of "U" (120V) version and following are the difference:

UP: CSA non-approved & LAC's warranty card included.

UQ: CSA approved & LAC's warranty card included.

SL ----- Basicly same as "SK" Version.

## **SWITCHES & CONTROLS**

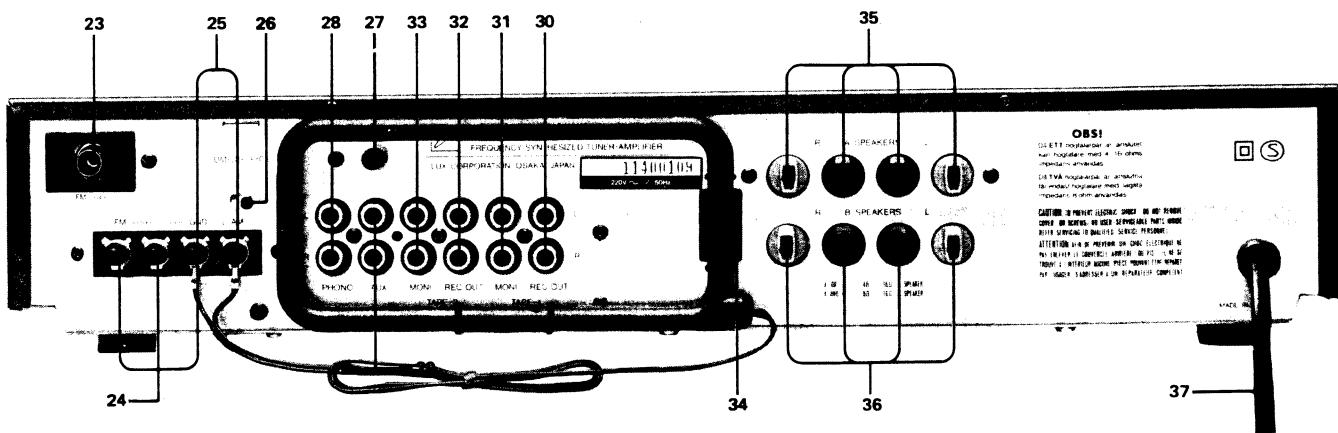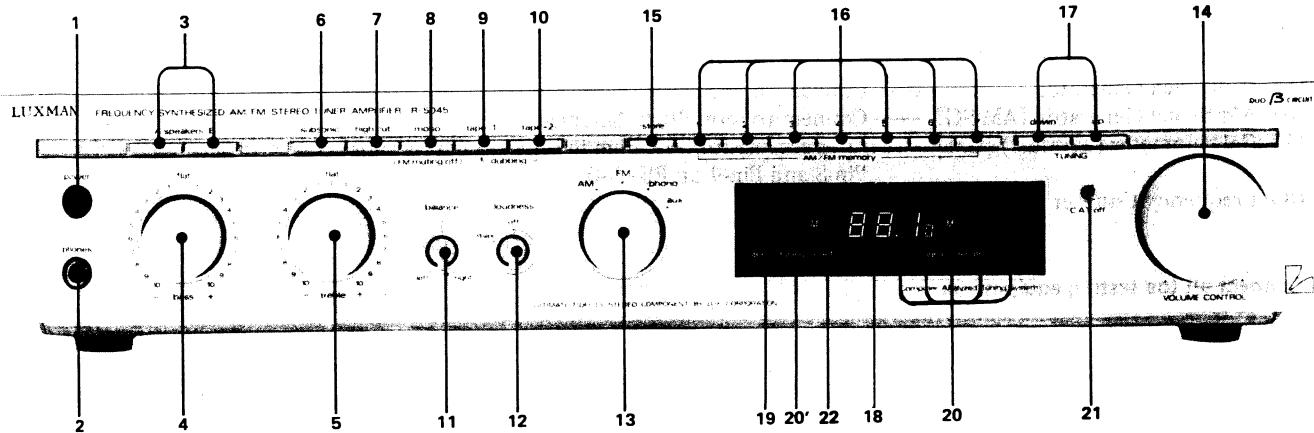


- |                                     |   |                                     |
|-------------------------------------|---|-------------------------------------|
| 1. Power Switch                     | 15. Store Switch                                  | 26. Battery Compartment             |
| 2. Head phone Jack                  | 16. Preset Station Buttons                        | 27. GND Terminal                    |
| 3. Speaker Selector Button          | 17. Tuning Keys                                   | 28. PHONO Terminal                  |
| 4. Bass Control                     | 18. Digital Frequency Readout                     | 29. AUX Terminal                    |
| 5. Treble Control                   | 19. Stereo Indicator                              | 30. REC. OUT-1 Terminal             |
| 6. Subsonic Filter                  | 20. Signal Strength Indicator                     | 31. Monitor-1 Terminal              |
| 7. High Cut Filter                  | 21. C.A.T. Off Switch                             | 32. REC. OUT-2 Terminal             |
| 8. Mono/Muting Off Switch           | 22. C.A.T. Indicator                              | 33. Monitor-2 Terminal              |
| 9. 10. Tape Monitor/Dubbing Buttons | 23. Coaxial Antenna Connector<br>(75 ohm)         | 34. AM Loop Antenna Holder          |
| 11. Balance Control                 | 24. FM. Antenna Terminals<br>(75 ohm and 300 ohm) | 35. 36. Speaker Terminals (A and B) |
| 12. Loudness Control                | 25. AM Antenna Terminal                           | 37. AC Power Cord                   |
| 13. Input Selector Switch           |   |                                     |
| 14. Volume Control                  |   |                                     |

# ALIGNMENT PROCEDURES


## TEST EQUIPMENT REQUIRED AND CONNECTION METHOD.

- (1) Oscilloscope
- (2) AC Voltage meter
- (3) Distortion Analyzer
- (4) FM Signal Generator [FM-SG] —— Connect to Antenna terminal through matching network.
- (5) Multi Plex Generator
- (6) AM Signal Generator [AM-SG] —— Connect to loop Stick Antenna.
- (7) Galvanometer ( $\pm 100\mu A$ ) [GM] —— Connect resistor 33K ohm in series to pin terminal Pin-8 and Pin-9 on PB1380.
- (8) Frequency Counter

Connect all the testing equipments

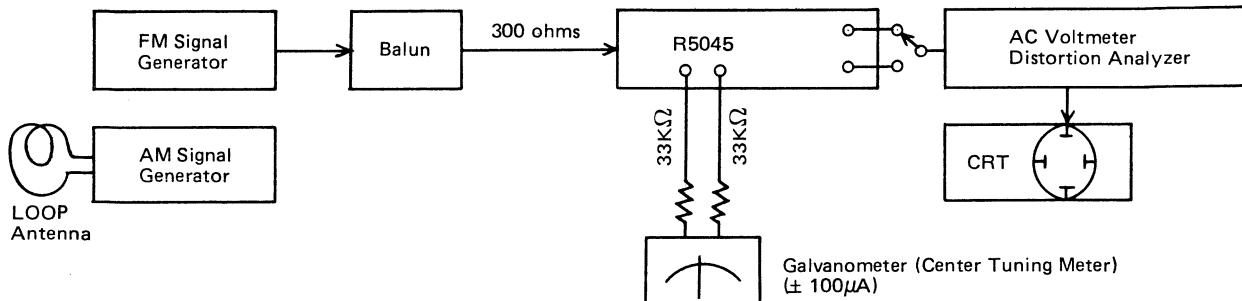

## ADJUSTMENT POINT ON PB1380

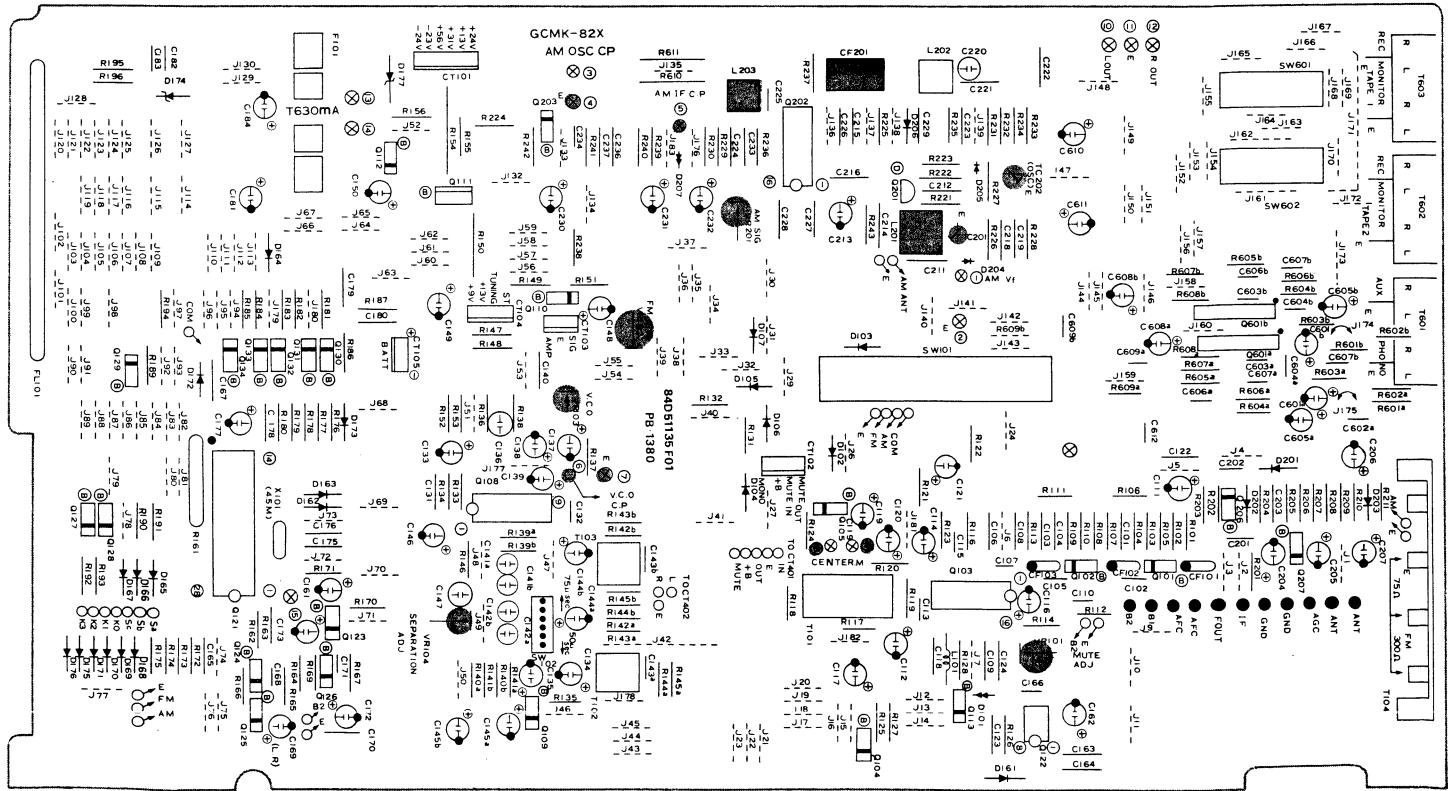

# SEP-UP UNIT

## PD-1380 PRELIMINARY ADJUSTMENT

- (1) VR-101: Turn to the center position for FM MUTING.
- (2) VR-102: Turn clockwise to the maximum for FM SIGNAL STRENGTH LEVEL.
- (3) VR-103: Turn to the center position for MPX VCO adjustment.
- (4) VR-104: Turn to the center position for MPX SEPARATION adjustment.
- (5) VR-201: Turn counter-clockwise to the maximum for AM SIGNAL STRENGTH LEVEL

Setting of Front panel Switches

- (1) MUTING OFF & MONO: Pushed
- (2) FUNCTION: FM
- (3) C.A.T.: Pushed
- (4) Hi-Cut: Extruded
- (5) Subsonic: Extruded
- (6) TAPE-1/TAPE-2: Extruded

Setting of Front Panel Variable resistor

- (1) VOLUME: Turn to the minimum.
- (2) LOUDNESS: Turn to the minimum.
- (3) TONE CONTROL: Set at the center position
- (4) BALANCE: Set at the center position
- (5) Employ the loop antenna (black) for AM adjustment

## AUDIO SECTION

### 1. Set up unit

- (1) Volume control Minimum
- (2) Tone Control Flat position
- (3) Speaker A Position

2. Turn on the power switch and await 3 minutes for warming-up.

### 3. DC offsets adjustment

- (1) Connect DC voltmeter to A speaker terminal.
- (2) Adjust on PB-1379

VR-803a	Left channel
VR-803b	Right channel

to get 0 V by DC voltmeter.

### 4. Bias (Idle current) adjustment

- (1) Take off fuse F801a/left chn., F-801b/right chn. on PB-1379.
  - (2) Connect DC Ammeter (100-150mA) between the both ends of the fuse holder.
  - (3) Adjust on PB-1379
- |         |               |
|---------|---------------|
| VR-804a | Left channel  |
| VR-804b | Right channel |

to get 50mA by DC Ammeter.

## TUNER SECTION

Remarks: It is recommended to adjust AM first since FM SIGNAL ADJUSTMENT is required again when VR-201 is set to the maximum or minimum.

### AM

Set the FUNCTION SW at AM.

#### 1. TRACKING ADJUSTMENT

- 1-1 Store 522, 603, 1008, 1404, 1611 KHz by any of 7 memory switches.
- 1-2 Connect Digital Multi Meter to pins No. 1 (hot side) and 2 (cold side) on PD-1380.
- 1-3 Adjust L-202 and TC-202 to obtain  $2.0 + 0.05V$  and  $7.0 \pm 0.05V$  at 603KHz and 1404KHz respectively. Repeat adjustment several times to get above voltages completely.
- 1-4 Confirm that the frequency band from 522 to 1611 KHz can be received by depressing the tuning (up/down) key continuously.
- 1-5 Connect the output of Sweep Generator to AM ANTENNA terminal and set the receiving display at 522 KHz.
- 1-6 Connect the input of Sweep Generator to pin No. 5 (hot side) and 4 (cold side) on PB-1380.
- 1-7 Adjust CF-201 and L-203 so that the IF wave-form should show the maximum and flat signal peak at 450 KHz. In this case, set the output of Sweep Generator at 20-40 dB and obtain the maximum output level without AGC effect by monitoring the wave-form.

- 1-8 Set AM SG at 1404 KHz, 400Hz 30% modulation, and adjust TC-201 to obtain the maximum output level at 50 ~ 55dB/M.
  - 1-9 Set the AM SG at 603 KHz and adjust L-201 to procure the maximum output level.
  - 1-10 Repeat steps 1-8 & 1-9 one after another until the optimum results can be obtained.
2. SIGNAL ADJUSTMENT
- 2-1 Set AM SG at 1008 KHz, with output 80dB/M.
  - 2-2 Tune the R5045 at 1008 KHz and adjust VR-201 to make 5 SIGNAL LED's light up.

**FM**


1. CENTER ADJUSTMENT of FM detector.
- 1-1 Set the FM SG at 98.0 MHz, 1MV, nonmodulation.
- 1-2 Tune the R5045 at 98.0 MHz with the display
- 1-3 Connect the center meter to pins No. 8 & 9 on PB1380 and adjust the core T101 [ A ] at the side of the frontend so that the needle of center meter shows "0".
2. TRACKING ADJUSTMENT
- 2-1 Set the FM SG at 108 MHz, about  $1\mu\text{V}$ , mono, 100% modulation.
- 2-2 Tune the R5045 at 108 MHz.
- 2-3 Adjust 3 trimmers except for the local oscillator FE-101 (FRONT END) to obtain the maximum output level.
- 2-4 Set the FM SG at 98.0 MHz.
- 2-5 Tune the R5045 at 98.0 MHz and adjust the IFT core of FE-101 (FRONT END) so that the maximum output is obtained.
- 2-6 Push the tuning keys (UP & DOWN) continuously and confirm that the frequency range from 87.50 to 108.00 MHz can be received.
3. MUTING LEVEL ADJUSTMENT
- 3-1 Set MUTING OFF & MONO switch extruded.
- 3-2 Set FM SG at  $3\mu\text{V}$ .
- 3-3 Adjust VR-101 so that the signal can perfectly come out.
4. SIGNAL STRENGTH ADJUSTMENT
- 4-1 Set FM SG at 1MV.
- 4-2 Adjust VR-102 to make 5 LED's light up.
- 4-3 Make output of SG null (0), and confirm no LED illuminates
5. MONO THD ADJUSTMENT
- 5-1 Set FM SG at 1MV.
- 5-2 Adjust the core of T-101 [ B ] near MPX IC to obtain the minimum distortion.
- 5-3 Since the center meter deviates by 5-2 adjustment, repeat the steps 1-3 & 5-2 until the minimum distortion can be obtained and the center meter shows (0) point. At this time, confirm that the LED, for C.A.T. does not light. When it lights up erroneously, tune out and make tuning again.
6. STEREO (DISTORTION, SEPARATION) ADJUSTMENT
- 6-1 Connect Frequency Counter to pins No. 6 (hot side) & 7 (cold side) on PB-1380.
- 6-2 Adjust VR-103 so that the counter indicates within  $19 \text{ KHz} \pm 10\text{Hz}$  when receiving NON MODULATION signal from FM SG.
- 6-3 Set FM SG at 1MV, mixed signals "pilot 10% and 1 KHz, L+R 90%".
- 6-4 If stereo distortion does not meet specification, turn the IFT of EF-101 (FRONT END) within 1/2 turn and set it at such point so that the minimum distortion can be obtained.
- 6-5 As the output at Front-end is lowered by 6-4 adjustment, make re-alignment repeating the steps 3 (Muting level Adj.) and 4 (Signal Strength adj.).
- 6-6 Adjust VR-104 to obtain the well-balanced separation.
7. CONFIRMATION FOR C.A.T. FUNCTION
- 7-1 Confirm that CAT LED is turned off when CAT switch is depressed. (CAT OFF). Also confirm that when the CAT Switch is set 'on', the LED is put off at interstation reception. while lighting up when the input signal exceeding muting level is received.
- 7-2 Set FM SG at 1MV, and make the CAT switch extruded (CAT AUTO). Confirm at this time if the CAT LED lights up at once, and that separation is better than 46dB at 1KHz (ANTI-BIRDIE OFF). If impossible to get this figure, after tuning out, make tuning again to get separation exceeding 46dB. Lower the SG output gradually, and confirm that when the SIGNAL LED is shifted from 2 points to one, the separation suddenly comes down to less than 10dB. (CAT AUTO: HIGH-BLEND ON, ANTI-BIRDIE FILTER OFF).
- 7-3 Prepare 2 set of FM SG and RF Mixing Pad, and set the main SG only for PILOT modulated with output at 1MV at ANTENNA terminal, while set the sub SG 100% modulated MONO, 1KHz, setting the frequency by 180 KHz away from that of the main SG, with  $500\mu\text{V}$  at ANTENNA. Receive the signal of the main SG and confirm that the audible beat noise level coming from speaker varies by pressing CAT SW on and off alternately.

# BLOCK DIAGRAM


R-5045 C.A.T. BLOCK DIAGRAM

## C.A.T. (Computer Analyzed Tuning) System

Our innovative C.A.T. system always provides an optimum reception according to the ambient conditions. Specifically, the anti-birdie and high-blend circuits are automatically activated, depending on the necessity, by sensing the electric field strength and interference by other stations, etc. The anti-birdie filter is useful to remove so-called "birdie" noises triggered by interference of FM stations adjacent to the desired one especially in central Europe having high congestion of stations.

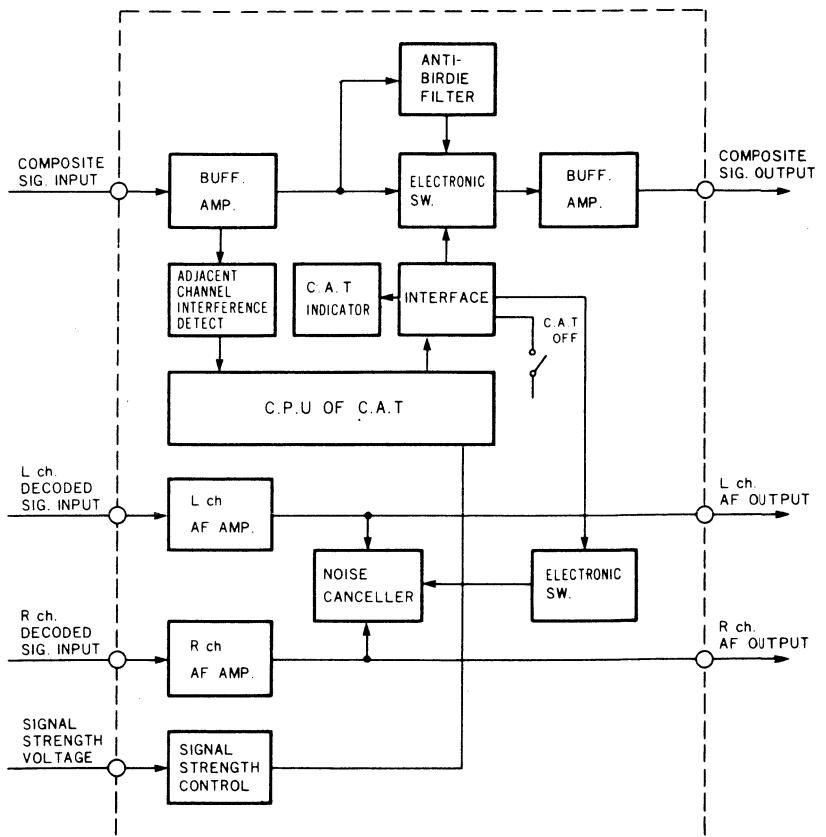

## STK3042 (TC0192)


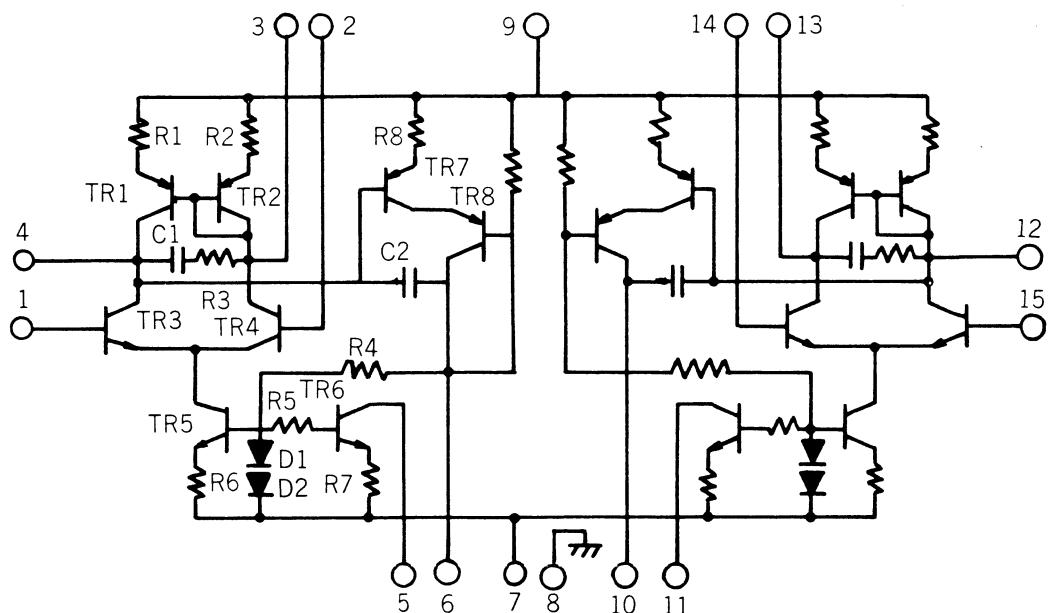


# TC4016 (TC5027) -Quad Bilateral Switch

## Truth table


CONT	IN	OUT
H	V <sub>DD</sub> ~ GND	V <sub>IN</sub>
L	V <sub>DD</sub> ~ GND	—

## Pin Connection

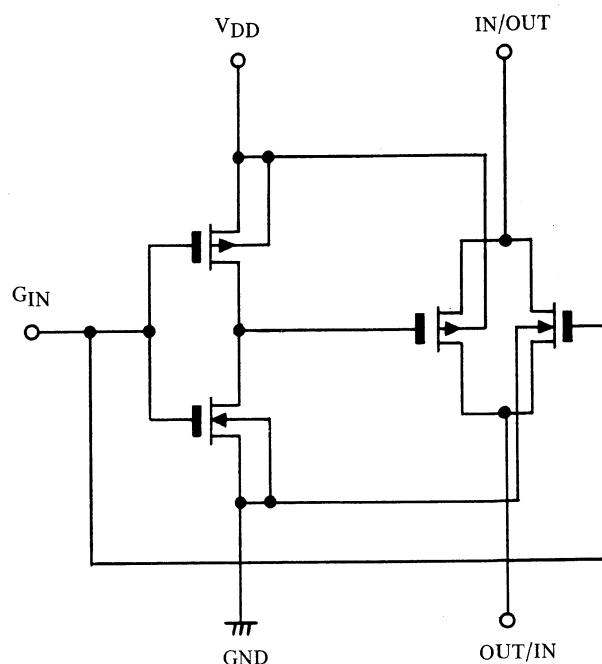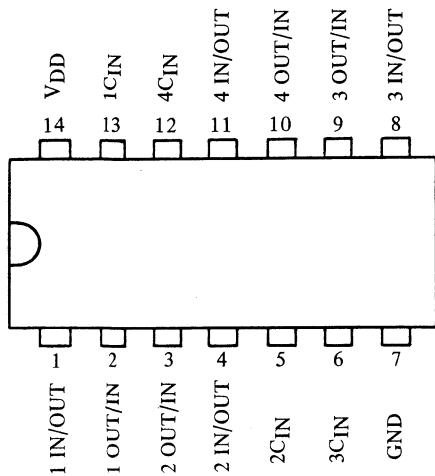


# uPB533AC (TC5033)-Prescaler

## BLOCK DIAGRAM

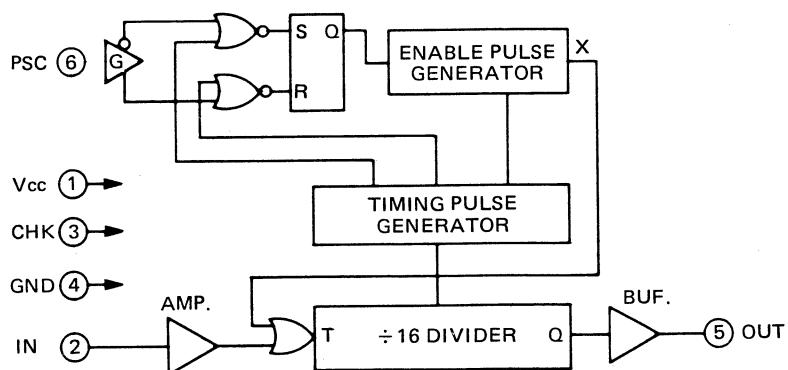


## PIN CONNECTION

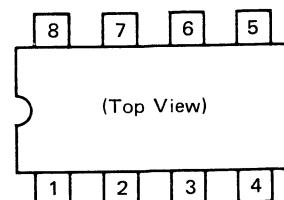


Pin No.	
1	V <sub>cc</sub>
2	IN
3	CHK
4	GND
5	OUT
6	PSC
7	NC
8	NC

## TIMING CHART

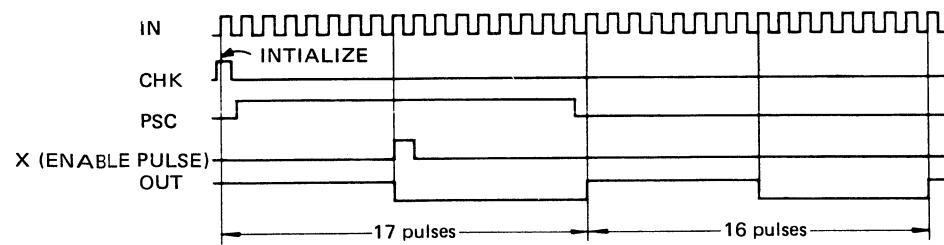


**uPD1703C (TC0194)-PLL Synthesigen and Control**

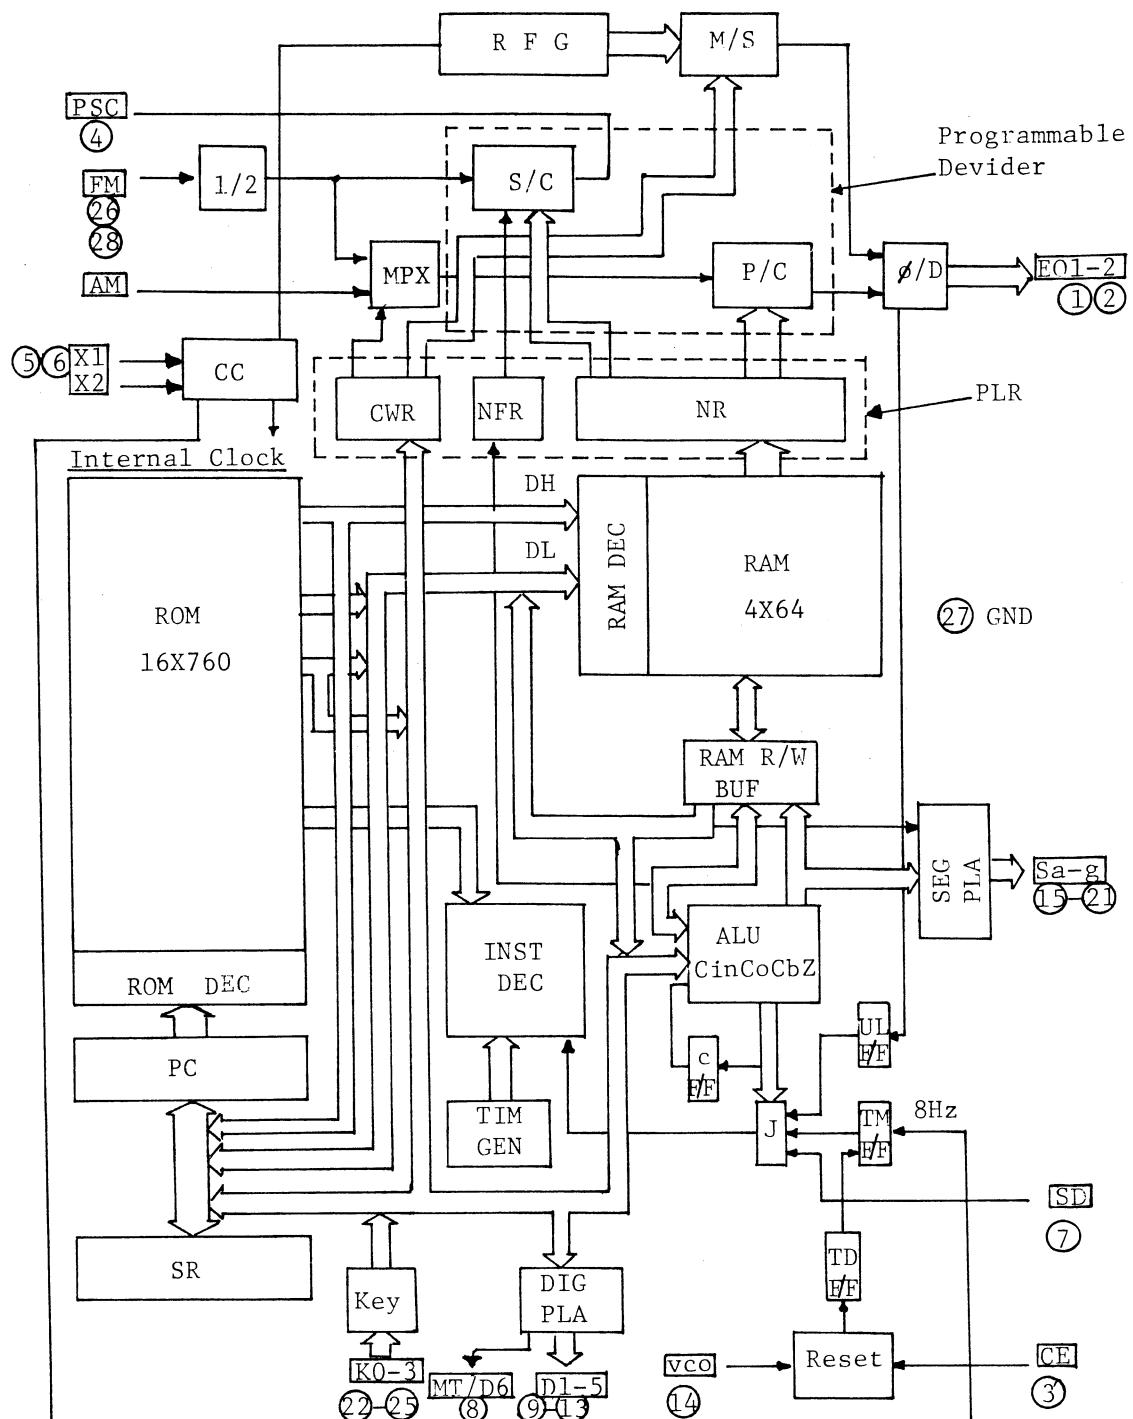


# REPLACEMENT PARTS


## Front View

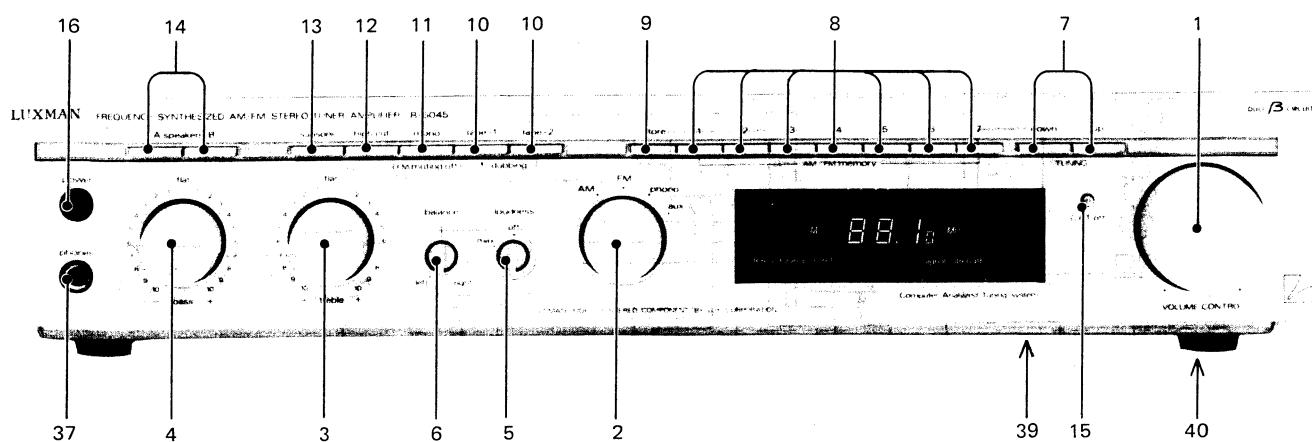

## Rear View

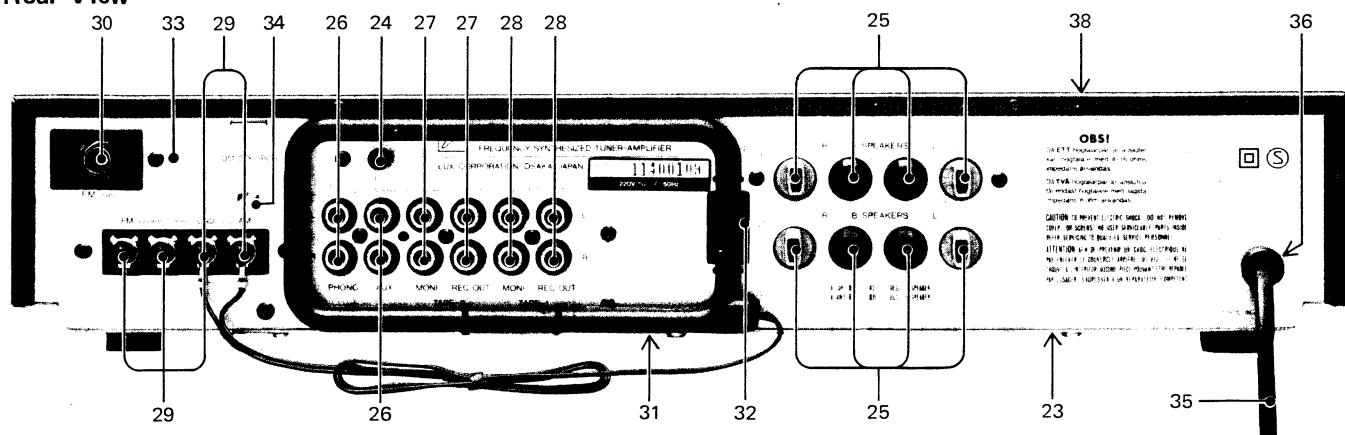

## Front panel Ass'y

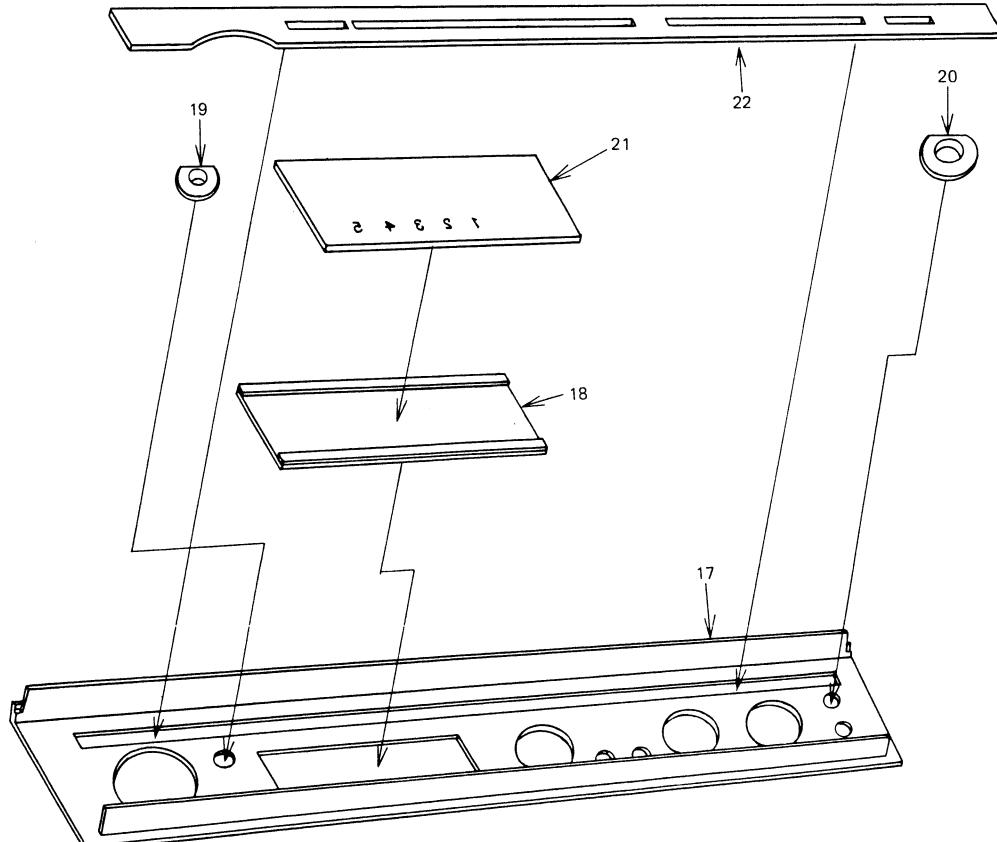

# Parts List .....Cosmetic, Switch, other


SYMBOL NO.	STOCK NO.	DESCRIPTION	REMARK	SYMBOL NO.	STOCK NO.	DESCRIPTION	REMARK
[Knob]							
1	36R51142F01-0	Volume cont.					
2	36R51143F01-0	Function					
3	36R51143F01-0	Treble					
4	36R51143F01-0	Bass					
5	36B51053F01-A	Loudness					
6	36B51053F01-A	Balance					
7	36B51051F01-A	Up, Down					
8	36B51052F01-A	Memory					
9	36B51052F01-A	Store					
10	36B51051F01-A	Tape-1, 2					
11	36B51051F01-A	Mono					
12	36B51051F01-A	High cut					
13	36B51051F01-A	Subsonic					
14	36B51051F01-A	Speaker					
15	36R43798U02-A	CAT					
16	36R51144F01-0	Power					
[Front Panel]							
17	64D51137F01-B	Front panel					
18	61A51035F01-0	Protector					
19	07R51141F01-0	Protector					
20	07R47364F01-0	Protector					
21	61A51045F01-A	Filter					
22	07D51064F01-0	Escutcheon					
[Rear Panel]							
23	15D51060F01-D 15D51060F02-B 15D51060F03-B	Rear panel	SD SG, SK E				
24	AG0120	GND terminal					
25	09T51101F01-0	Speaker terminal					
26	09T51123F01-0	Input terminal Aux	Phono				
27	09T51123F01-0	Tape-2					
28	09T51123F01-0	Tape-1					
29	09T51122F01-0	ANT. terminal, 4p					
30	AS0156 AS0046	75 ohm 75 ohm	SG, SK SD				
31	85T51078F01-0	Loop ANT.					
32	55T51079F01-0	Loop ANT. holder					
33	09T51065F01-0	Battery holder					
34	09T51068F01-0	Battery case					
35	15A51043F01-A 03AD51797F01	Battery cover Screw, Battery cover	EZ EK, SK, SD SG				
36	BK0018 BK0022 BK0023 BU0033 09T51832F01-0	Power Cord Bushing AC Outlet	E only				
[Line voltage selector] · · · · E only							
		AC0054 AC0041 15A51044F01-0	Socket Plug Cover, plug				
[Switch]							
SW509.10	40T51081F01-0	Up, Down					
SW501-8	40T51081F01-0	Memory, Store					
SW601-2	40T51099F01-0	Tape-1, 2					
SW703	40T51113F01-0	Mono					
SW702	40T51113F01-0	High cut					
SW701	40T51113F01-0	Subsonic					
SW704	40T51113F01-0	Speaker					
SW401	40T51082F01-B	CAT					
SW001	SP0167 SP0166	Power Power					
SW101	40T51097F01-0	Function, slid					U only
[Potentiometer]							
VR901	18T5110F01-0	Volume cont. 100K x 2	B				
VR801	18T51109F01-0	Loudness					
VR802	18T51111F01-0	Balance					
VR806	18T51112F01-0	Treble					
VR805	18T51112F01-0	Bass					
[Other]							
37	AT0020	Head Phone jack					
38	15D51063F01-A	Bonnet					
39	15D51062F01-A	Bottom plate					
40	75A43532P01-A 45C51054F01-B	Foot Extension arm, Tape sel.					
	45B51050F01-A 25T52990F01-0	CAT Power transformer					
	25T51073F01-0	120V					
	25T51829F01-0	220, 240V					S
	TR0329	100-240V					E
	TR0330	Power Tr, 2SA1102					
	TR0198	Power Tr, 2SC2577					
		Bias Tr, 2SC1815					
[Packing material]							
	56C50570F07-0 56D51147F01-0 68R51239F01-A	Carton Pad Owner's manual					

# P.C.B. parts list

## REMARKS

Capacitor:	My..... Mylar, Mi..... Mica, Tm..... Trimmer	El..... Electrolytic, Ta..... Tantalum, Ac..... Ac Capacitor,	St..... Styrol, Lp..... Line pass (AC Cap.) Fi..... Film Cap	Ce..... Ceramic
Resistor:	Rd..... Carbon, Ro..... Oxid Metal, ± 5%, 0.25W, unless specified otherwise.	Rc..... Cement,	Rm..... Metal Film,	Rf..... Flame proof

PB-1377

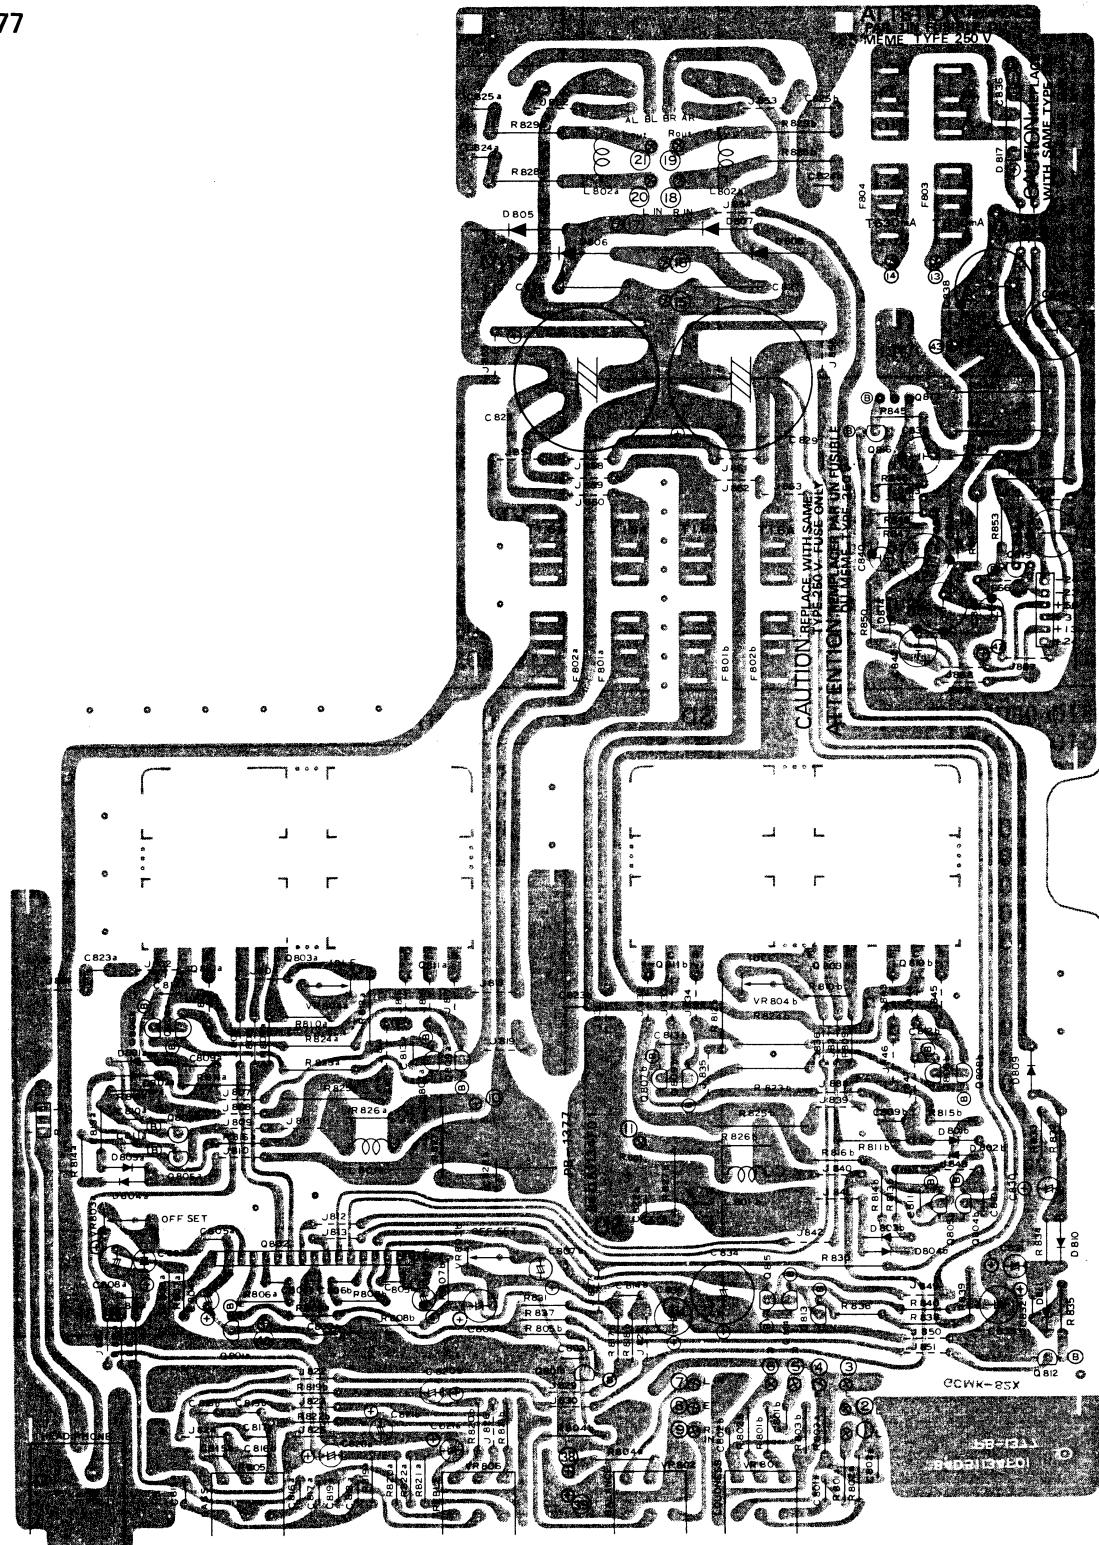

SYMBOL NO.	STOCK NO.	DESCRIPTION			REMARK
[Capacitor]					
C701A, B	CQ0178T	0.12 $\mu$	50V	My	
C702A, B	CQ0018T	0.0056 $\mu$	50V	My	
C801A, B	CQ0028T	0.0018 $\mu$	50V	My	
C802A, B	CQ0011T	0.033 $\mu$	50V	My	
C803A, B	CC00071	100P	50V	Ce	
	CC0009T	200P	50V	Ce	SD
C804A, B	CE0785				
C805A, B	CC0035T	270P	50V	Ce	
	CC0011T	470P	50V	Ce	SD
C806A, B	CC0008T	150P	50V	Ce	
C807A, B	CE1750T	1 $\mu$	50V	E1	
C808A, B	CE1720T	47 $\mu$	16V	E1	
C809A, B	CK0146T	0.04 $\mu$	50V	Ce	
C810A, B	CC0011T	470P	50V	Ce	
C811A, B	CC0011T	470P	50V	Ce	
C812A, B	CC0161T	56P	50V	Ce	
C813A, B	CC0005T	33P	50V	Ce	
C814A, B	CM0052	15P	500V	Mi	
C815A, B	CQ0027T	0.0068P	50V	My	
C816A, B	CQ0011T	0.033 $\mu$	50V	My	
C817A, B	CQ0007T	0.068 $\mu$	50V	My	
C818A, B	CQ0020T	0.0039 $\mu$	50V	My	
C819A, B	CQ0013T	0.022 $\mu$	50V	My	
C820A, B	CE1753T	4.7 $\mu$	50V	E1	
C821A, B	CE1718T	22 $\mu$	50V	E1	
C822A, B	CQ0009T	0.047 $\mu$	50V	My	
C823A, B	CK0146T	0.04 $\mu$	50V	Ce	
C824A, B	CK0146T	0.04 $\mu$	50V	Ce	
C825A, B	CK0146T	0.04 $\mu$	50V	Ce	SD
C826	CU0040	0.01 $\mu$	25V	Ac	
C827	CU0040	0.01 $\mu$	25V	Ac	
C828	CE1027	6,800 $\mu$	50V	E1	
C829	CE1027	6,800 $\mu$	50V	E1	
C830	CE1754T	10 $\mu$	50V	E1	
C831	CE1754T	10 $\mu$	50V	E1	
C832	CK0155T	0.01 $\mu$	50V	Ce	
C833	CE1753T	4.7 $\mu$	50V	E1	
C834	CE1759	220 $\mu$	50V	E1	
C835	CE1757T	47 $\mu$	50V	E1	
C836	CK0195	0.01 $\mu$	500V	Ce	
C837	CE1733	220 $\mu$	25V	E1	
C838	CE1747	1000 $\mu$	35V	E1	
C839	CE1721T	100 $\mu$	16V	E1	
C840	CE1710T	47 $\mu$	10V	E1	
C841	CE1722	220 $\mu$	16V	E1	
C842	CE1712T	220 $\mu$	10V	E1	
C843	CE1746	470 $\mu$	35V	E1	
C844	CE1733	220 $\mu$	25V	E1	
C845	CE1729T	22 $\mu$	25V	E1	

SYMBOL NO.	STOCK NO.	DESCRIPTION			REMARK
[Diode]					
D801A, B	TD0227T	1SS41			
D802A, B	TD0227T	1SS41			
D803A, B	TD0227T	1SS41			
D804A, B	TD0227T	1SS41			
D805	TD0105	S3V20			
D806	TD0105	S3V20			
D807	TD0105	S3V20			
D808	TD0105	S3V20			
D809	TD0003	IN4003			
D810	TD0003	IN4003			
D811	TD0177	ZENER WZ-182			
D813	TD0045	ZENER WZ-056			
D812	TD0068T	ZENER WZ-240			
D814	TD0045	ZENER WZ-056			
D815	TD0068T	ZENER WZ-240			
D817	TD0137	S1VB10			
[Transistor, IC]					
Q801A, B	TR0087	2SA1015			
Q802	TC0192	IC, STK-3042			
Q804A, B	TR0198	2SC1815			
Q805A, B	TR0087	2SA1015			
Q806A, B	TR0198	2SC1815			
Q807A, B	TR0087	2SA1015			
Q808A, B	TR0264	2SC2235			
Q809A, B	TR0263	2SA965			
Q812	TR0320	2SA992			
Q813	TR0320	2SA992			
Q814	TR0320	2SA992			
Q815	TR0263	2SA965			
Q816	TR0198	2SA1815			
Q817	TR5012	2SD880			
Q819	TR0087	2SA1015			
[Resistor]					
R701 A, B	RB0444T	1M			
R702A, B	RB0444T	1M			
R703A, B	RB0384T	3.3K			
R704A, B	RB0392T	6.8K			
R705A, B	RS2568L	220			
R801A, B	RB0378T	1.8K			
R802A, B	RB0388T	4.7K			
R803A, B	RB0390T	5.6K			
R804A, B	RD0133	560 1/2			
R805A, B	RB0396T	10K			
R806A, B	RB0374T	1.2K			
R807A, B	RB0414T	56K			

## PB-1383


SYMBOL NO.	STOCK NO.	DESCRIPTION	REMARK
R808A, B	RB0364T	470	
R809A, B	RB0392T	6.8K	
R810A, B	RB0376T	1.5K	
R811A, B	RS2506L	33	
R812A, B	RS2506L	33	
R813A, B	RB0400T	15K	
R814A, B	RB0400T	15K	
R815A, B	RB0360T	330	
R816A, B	RB0360T	330	
R817A, B	RB0394T	8.2K	
R818A, B	RB0412T	47K	
R819A, B	RB0394T	8.2K	
R820A, B	RB0378T	1.8K	
R822A, B	RB0376T	1.5K	
R823A, B	RS2528L	2.2K 1/2W Rf	
R824A, B	RS2514L	150 1/2W Rf	
R825A, B	RG0600	0.22 5W Rc	
R826A, B	RB0324T	10	
R827A, B	RS2501L	10 1/2W Rf	
R830	RS2508L	47 1/2W Rf	
R831	RB0422T	120K	
R832	RB0372T	1K	
R833	RB0396T	10K	
R834	RB0432T	330K	
R835	RB0412T	47K	
R836	RB0396T	10K	
R837	RB0396T	10K	
R838	RB0404T	22K	
R839	RB0420T	100K	
R840	RB0372T	1K	
R841	RS2519L	390 1/2W Rf	
R842	RS2954LA	100 2W Rf	
R843	RS2954LA	100 2W Rf	
R844	RB0370T	820	
R845	RB0370T	820	
R846	RB0378T	8.2K	
R847	RB0396T	10K	
R848	RB0396T	10K	
R850	RD0134	470 1/2W	
R852	RS2518L	330 1/2W Rf	
R853	RB0406T	27K	
<b>[Switch]</b>			
SW701	SP0198	SUL531S	
SW702	SP0198	SUL531S	
SW703	SP0198	SUL531S	
SW704	SP0198	SUL531S	
SW705	SP0198	SUL531S	
<b>[Potentiometer]</b>			
VR801	RV0283	100K x 2 (A)	
VR802	RV0285	250K x 2 (MN)	
VR803A, B	RT0056	50K (B)	
VR804A, B	RT0050	500 (B)	
VR805	RV0286	50K x 2 (C)	
VR806	RV0286	50K x 2 (C)	
VR901	RV0284	100K x 2(B)	
R828A, B	RS2501L	10 1/2W	SD
R829A, B	RS2501L	10 1/2W	SD

SYMBOL NO.	STOCK NO.	DESCRIPTION	REMARK
<b>[Switch]</b>			
SW501	SP0261	KHC 15001	
SW502	SP0261	KHC 15001	
SW503	SP0261	KHC 15001	
SW504	SP0261	KHC 15001	
SW505	SP0261	KHC 15001	
SW506	SP0261	KHC 15001	
SW507	SP0261	KHC 15001	
SW508	SP0261	KHC 15001	
SW509	SP0261	KHC 15001	
SW510	SP0261	KHC 15001	

**Power, Bias, Transistor**

SYMBOL NO.	STOCK NO.	DESCRIPTION	REMARK
<b>[Transistor]</b>			
Q803A	TR0198	TR 2SC1815	Bias
Q803B	TR0198	TR 2SC1815	Bias
Q810A	TR0330	TR 2SC2577	Power
Q810B	TR0330	TR 2SC2577	Power
Q811A	TR0329	TR 2SA1102	Power
Q811B	TR0329	TR 2SA1102	Power

PB-1380

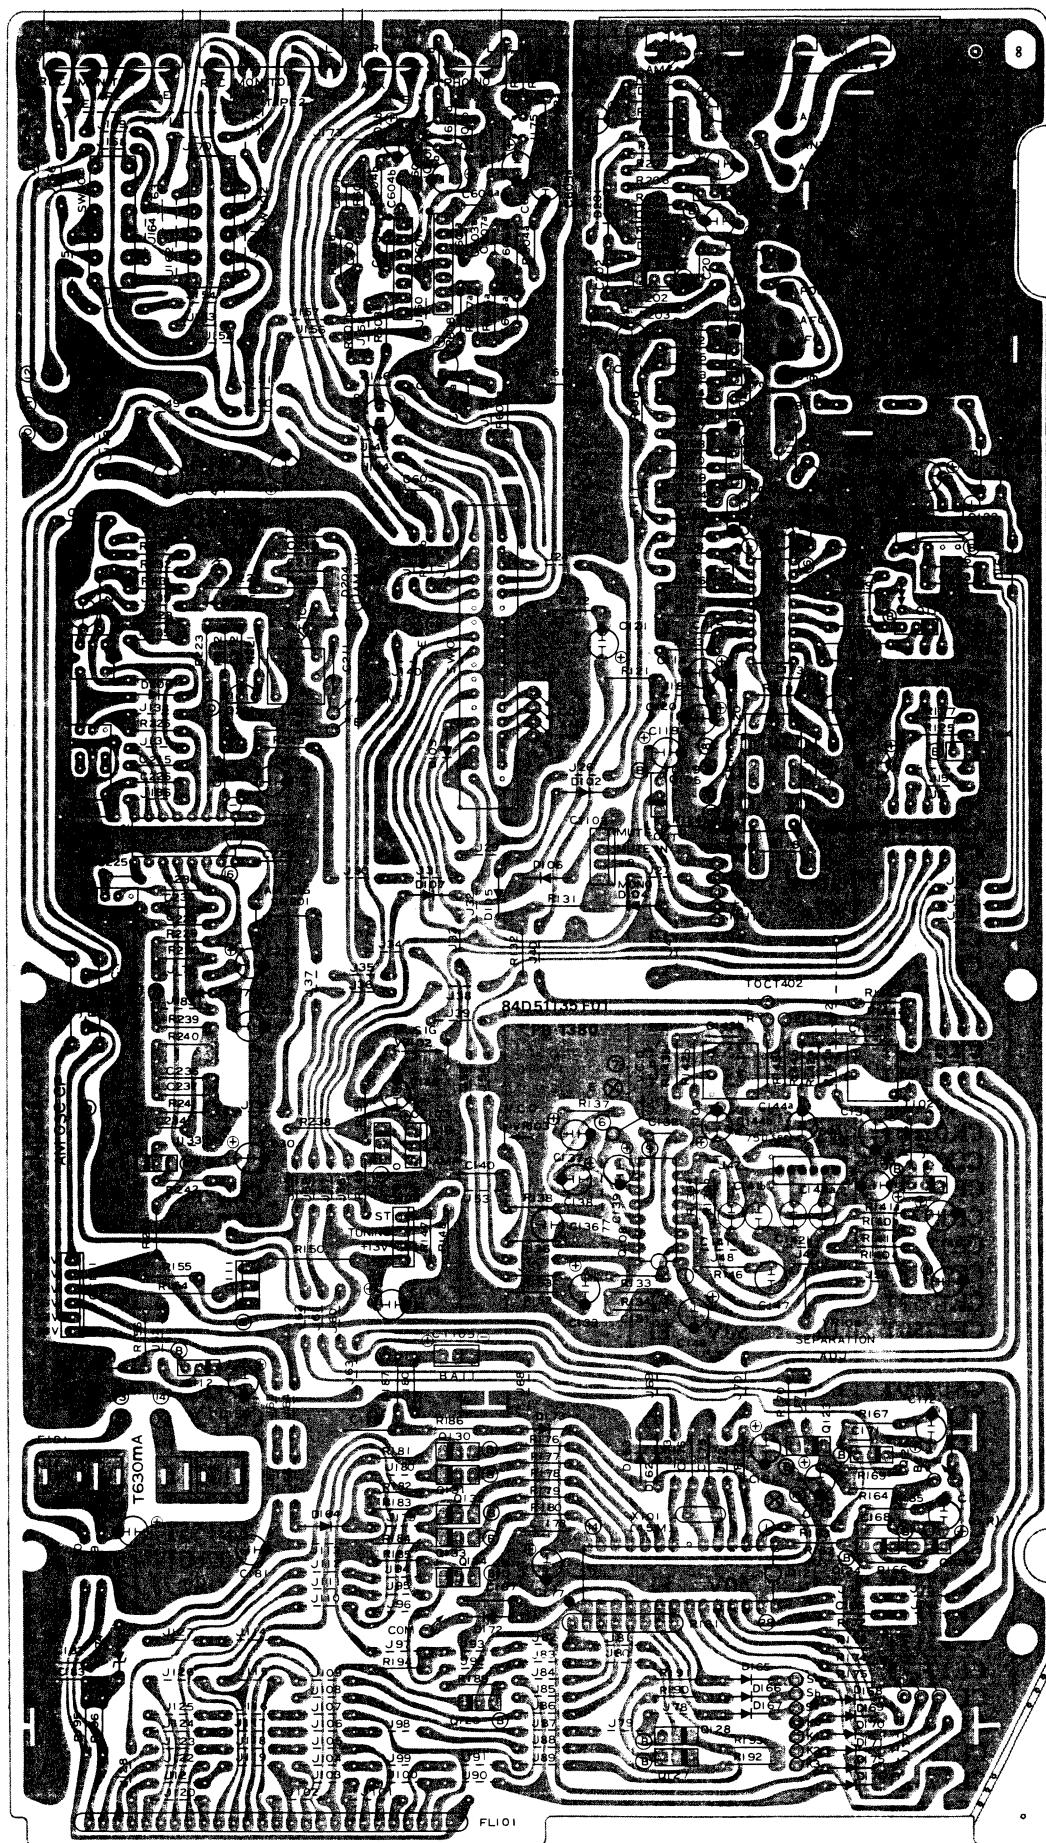

SYMBOL NO.	STOCK NO.	DESCRIPTION	REMARK
J148 J3	CK0142 RB0342T	0.1μF 50V Ce 50 ohm	SD SD
[Ceramic filter]			
CF101	LA1840	SEE10.7 (Red)	
CF102	LA1840		
CF103	LA1839		
CF201	LA1455	AM48T-067	
[Capacitor]			
C101	CK0260T	0.022μ 50V Ce	
C102	CC0033T	10P 50V Ce	
C103	CK0260T	0.022μ 50V Ce	
C104	CK0260T	0.022μ 50V Ce	
C105	CC0033T	10P 50V Ce	
C106	CK0260T	0.022μ 50V Ce	
C107	CK0157T	0.04μ 50V Ce	
C108	CK0260T	0.022μ 50V Ce	
C109	CK0260T	0.022μ 50V Ce	
C110	CK0156	0.022μ 50V Ce	
C111	CE1720T	47μ 16V Ce	
C112	CE1721T	100μ 16V El	
C113	CK0157T	0.04μ 50V Ce	
C114	CE1751T	2.2μ 50V El	
C115	CC00071T	100P 50V El	
C116	CE1749T	47μ 50V El	
C117	CE1721T	100μ 50V El	
C118	CK0260T	0.022μ 25V Ce	
C120	CE1751T	2.2μ 50V El	
C121	CE1718T	22μ 16V El	
C122	CK0260T	0.022μ 25V Ce	
C123	CK0251T	220P 25V Ce	
C124	CK0260T	0.022μ 25V Ce	
C131	CK0260T	0.022μ 25V Ce	
C132	CQ0009T	0.04μ 25V My	
C133	CE1717T	10μ 16V El	
C134	CE1721T	100μ 16V El	
C135	CE1717T	10μ 16V El	
C136	CQ5078	470P 50V St	
C137	CE1752T	3.3μ 50V El	
C138	CE1750T	1μ 50V El	
C139	CE0783	0.22μ 50V El	
C140	CK0260T	0.022μ 25V Ce	
C141A	CQ0130T	0.001μ 50V My	
C141B	CQ0130T	0.001μ 50V My	
C142A	CQ0304T	680P 50V PP	
C142B	CQ0304T	680P 50V PP	
C143A	CQ0027T	0.0068μ 50V My	
C143B	CQ0027T	0.0068μ 50V My	
C144A	CE1751T	2.2μ 50V El	
C144B	CE1751T	2.2μ 50V El	
C145A	CE1717T	10μ 16V El	
C145B	CE1717T	10μ 16V El	
C146	CE1720T	47μ 16V El	
C147	CQ1403	100P 50V St	
C148	CE1717T	10μ 16V El	
C150	CE1753T	4.7μ 50V El	
C161	CE1753T	4.7 50V El	

SYMBOL NO.	STOCK NO.	DESCRIPTION	REMARK
C162	CE1720T	47μ 16V El	
C163	CK0260T	0.022μ 25V Ce	
C164	CK0260T	0.022μ 25V Ce	
C165	CK0260T	0.022μ 25V Ce	
C166	CC0033T	10P 50V Ce	
C167	CK0255T	0.001μ 25V Ce	
C168	CK0156	0.022μ 25V Ce	
C169	CE0789	4.7μ 50V El	
C170	CK0260T	0.022μ 25V Ce	
C171	CK0156	0.022μ 25V Ce	
C172	CE0787	2.2μ 50V El	
C173	CE1729T	22μ 25V El	
C175	CC0161T	56P 50V Ce	
C176	CC0161T	56P 50V Ce	
C177	CE1706	1000μ 6.3V El	
C178	CK0260T	0.022μ 25V Ce	
C180	CK0260T	0.022μ 25V Ce	
C181	CE1733	220μ 25V El	
C182	CK0156	0.022μ 25V Ce	
C183	CK0156	0.022μ 25V Ce	
C184	CE1749T	47μ 50V El	
C201	CK0155T	0.01μ 50V Ce	
C202	CC0007T	100P 50V Ce	
C203	CK0255T	0.001μ 25V Ce	
C204	CE1749T	47μ 50V El	
C205	CE1750T	1μ 50V El	
C206	CE1717T	10μ 16V El	
C207	CE1717T	10μ 16V El	
C211	CK0260T	0.022μ 25V Ce	
C212	CK0260T	0.022μ 25V Ce	
C213	CE1721T	100μ 16V Ce	
C214	CK0260T	0.022μ 25V Ce	
C215	CK0260T	0.022μ 25V Ce	
C216	CK0260T	0.022μ 25V Ce	
C218	CK0260T	0.022μ 25V Ce	
C219	CK0260T	0.022μ 25V Ce	
C220	CQ1412	270P 50V St	
C221	CK0255T	0.001μ 25V Ce	
C222	CK0260T	0.022μ 25V Ce	
C223	CK0260T	0.022μ 25V Ce	
C224	CK0257T	0.0047μ 25V Ce	
C225	CC0162	180P 50V Ce	
C226	CK0260T	0.022μ 25V Ce	
C227	CK0260T	0.022μ 25V Ce	
C228	CK0260T	0.022μ 25V Ce	
C229	CK0260T	0.022μ 25V Ce	
C230	CE1720T	47μ 16V El	
C231	CE1753T	4.7μ 50V El	
C232	CE1717T	10μ 16V El	
C233	CK0260T	0.022μ 25V Ce	
C234	CK0155T	0.01μ 50V Ce	
C236	CK0260T	0.022μ 25V Ce	
C601A	CE0787	2.2μ 50V El	
C601B	CE0787	2.2μF 50V El	
C602A	CC0011T	470P 50V Ce	
C602B	CC0011T	470P 50V Ce	
C603A	CK0113T	0.001μ 50V Ce	
C603B	CK0113T	0.001μ 50V Ce	
C604A	CC0006T	47P 50V Ce	
C604B	CC0006T	47P 50V Ce	
C605A	CE1720T	47μ 16V El	

SYMBOL NO.	STOCK NO.	DESCRIPTION	REMARK
C605B	CE1720T	47μ 16V El	
C606A	CQ0015T	0.012μF 50V My	
C606B	CQ0015T	0.012μ 50V My	
C607A	CQ0020T	0.039μ 50V My	
C607B	CQ0020T	0.039μ 50V My	
C608A	CE0786	1μ 50V El	
C608B	CE0786	1μ 50V El	
C609A	CC0007T	100P 50V Ce	
C609B	CC0007T	100P 50V Ce	
C610	CE1733	220μ 25V El	
C611	CE1733	220μ 25V El	
C612	CK0157T	0.04μ 50V Ce	
[Diode]			
D101	TV0030	VARISTOR, KB265C4	
D102	TD0227T	Di. 1SS41	
D103	TD0227T	Di. 1SS41	
D104	TD0227T	Di. 1SS41	
D105	TD0227T	Di. 1SS41	
D106	TD0227T	Di. 1SS41	
D107	TD0227T	Di. 1SS41	
D161	TD0027T	Di. 1SS41	
D162	TD0227T	Di. 1SS41	
D163	TD0227T	Di. 1SS41	
D164	TD0227T	Di. 1SS41	
D165	TD0227T	Di. 1SS41	
D166	TD0227T	Di. 1SS41	
D167	TD0227T	Di. 1SS41	
D168	TD0227T	Di. 1SS41	
D169	TD0227T	Di. 1SS41	
D170	TD0227T	Di. 1SS41	
D172	TD0227T	Di. 1SS41	
D173	TD0227T	Di. 1SS41	
D174	TD0045	ZENER, WZ-056 (5, 6V)	
D175	TD0227T	Di. 1SS41	
D176	TD0227T	Di. 1SS41	
D176	TD0227	Di 1SS41	
D177	TD0036	ZENER, ZW-260 (26V)	
D201	TD0018	Di. 1K188FM	
D202	TD0018	Di. 1K188FM	
D203	TD0018	Di. 1K188FM	
D204	TD0228	VARACTOR, SVC321	
D205	TD0228	VARACTOR, SVC321	
[Transformer, Coil, other]			
L101	LA1023	Coaxial coil LA104T	
L201	LA1210	Loop ANT.	
L202	LA1456	AM OSC	
L203	LA1458	AM IFT	
FE101	LA1916	Front end, FD216U 11X	
FL101	TT5010	FL. INDICATOR	

SYMBOL NO.	STOCK NO.	DESCRIPTION	REMARK
[Transistor]			
Q101	TR0353	2SC2063P	
Q102	TR0353	2SC2063P	
Q103	TC0190	LA1235	
Q104	TR0354	2SC2021R	
Q105	TR0354	2SC2021R	
Q108	TC0193	UPC1235C	
Q109	TR0354	2SC2021R	
Q110	TR0354	2SC2021R	
Q111	TR5012	2SD880	
Q112	TR0354	2SC2021R	
Q113	TR0354	2SC2021R	
Q121	TC0194	IC UPD1703C	
Q122	TC5033	UPB553AC	
Q123	TR0354	2SC2021R	
Q124	TR0354	2SC2021R	
Q125	TR0354	2SC2021R	
Q126	TR0355	2SC1545B	
Q127	TR0354	2SC2021R	
Q128	TR0354	2SC2021R	
Q129	TR0354	2SC2021R	
Q130	TR0356	2SA937R	
Q131	TR0356	2SA937R	
Q132	TR0356	2SA937R	
Q133	TR0356	2SA937R	
Q134	TR0356	2SA937R	
Q201	TF0031	FET 2SK61	
Q202	TC0169	IC LA1240	
Q203	TR0354	2SC2021R	
Q204	TR0354	2SC2021R	
Q206	TR0353	2SC2063P	
Q207	TR0354	2SC2021R	
Q601A	TC0195	IC M5213L	
Q601B	TC0195	IC M5213L	
[Resistor]			
R101	RB0364T	470	
R102	RB0382T	2.7K	
R103	RB0348T	100	
R104	RB0348T	100	
R105	RB0360T	330	
R106	RB0348T	100	
R107	RB0364T	470	
R108	RB0382T	2.7K	
R109	RB0364T	470	
R110	RB0360T	330	
R111	RB0348T	100	
R112	RB0404T	22K	
R113	RB0364T	470	
R114	RB0418T	82K	
R116	RB0416T	68K	
R117	RB0390T	5.6K	
R118	RB0380T	2.2K	
R119	RB0356T	220	
R120	RB0400T	15K	
R121	RB0396T	10K	
R122	RB0380T	2.2K	
R123	RB0356T	220	


SYMBOL NO.	STOCK NO.	DESCRIPTION	REMARK	SYMBOL NO.	STOCK NO.	DESCRIPTION	REMARK
R124	RB0388T	4.7K		R185	RB0420T	100K	
R125	RB0368T	680		R186	RB0412T	47K	
R126	RB0430T	270K		R187	RB0412T	47K	
R127	RB0412T	47K		R189	RB0412T	47K	
R128	RB0400T	15K		R190	RB0412T	47K	
R131	RB0412T	47K		R191	RB0412T	47K	
R132	RB0396T	10K		R192	RB0420T	100K	
R133	RB0408T	33K		R193	RB0420T	100K	
R134	RB0420T	100K		R194	RB0420T	100K	
R135	RB0384T	3.3K		R195	RB0356T	220	
R136	RB0400T	15K		R196	RB0356T	220	
R137	RB0372T	1K		R201	RB0372T	1K	
R138	RB0374T	1.2K		R202	RB0432T	330K	
R139A	RB0412T	47K		R203	RB0384T	3.3K	
R139B	RB0412T	47K		R204	RB0420T	100K	
R140A	RB0404T	22K		R205	RB0382T	2.7K	
R140B	RB0404T	22K		R206	RB0436	470K	
R141A	RB0390T	3.3K		R207	PB0384T	3.3K	
R141B	RB0390T	5.6K		R208	RB0412T	47K	
R142A	RB0372T	1K		R209	RB0420T	100K	
R142B	RB0372T	1K		R210	RB0408T	33K	
R143A	RB0374T	1.2K		R211	RB0408T	33K	
R143B	RB0374T	1.2K		R221	RB0342T	56	
R144A	RB0388T	4.7K		R222	RB0380T	2.2K	
R144B	RB0388T	4.7K		R223	RB0348T	100	
R145A	RB0356T	220		R224	RB0348T	100	
R145B	RB0356T	220		R225	RB0372T	1K	
R146	RB0348T	100		R226	RB0420T	100K	
R147	RB0396T	10K		R227	RB0420T	100K	
R148	RB0412T	47K		R228	RB0396T	10K	
R149	RB0412T	47K		R229	RB0396T	10K	
R150	RS3069	82	1W Rf	R230	RB0396T	10K	
R151	RB0412T	47K		R231	RB0430T	270K	
R152	RB0420T	100K		R232	RB0406T	27K	
R153	RB0394T	8.2K		R233	RB0358T	270	
R154	RS2953L	180		R234	RB0388T	4.7K	
R155	RB0372T	1K		R235	RB0348T	100	
R156	RB0384T	3.3K		R236	RB0364T	470	
R161	RK7001	100K, Network		R237	RB0380T	2.2K	
R162	RB0388T	4.7K		R238	RB0396T	10K	
R163	RB0400T	15K		R239	RB0382T	2.7K	
R164	RB0388T	4.7K		R240	RB0400T	15K	
R165	RB0372T	1K		R241	RB0404T	22K	
R166	RB0452T	2.2M		R242	RB0412T	4.7K	
R167	RB0372T	1K		R243	RB0348T	100	
R169	RB0396T	10K		R601A	RB0416T	68K	
R170	RB0404T	22K		R601B	RB0416T	68K	
R171	RB0412T	47K		R602A	RB0384T	3.3K	
R172	RB0408T	33K		R602B	RB0384T	3.3K	
R173	RB0408T	33K		R603A	RB0428T	220K	
R174	RB0408T	33K		R603B	RB0428T	220K	
R175	RB0408T	33K		R604A	RB0360T	330	
R176	RB0412T	47K		R604B	RB0360T	330	
R177	RB0412T	47K		R605A	RB0428T	220K	
R178	RB0412T	47K		R605B	RB0428T	220K	
R179	RB0412T	47K		R606A	RB0402T	18K	
R180	RB0412T	47K		R606B	RB0402T	18K	
R181	RB0420T	100K		R607A	RB0364T	470	
R182	RB0420T	100K		R607B	RB0364T	470	
R183	RB0420T	100K		R608A	RB0372T	1K	
R184	RB0420T	100K		R608B	RB0372T	1K	

PB-1381

SYMBOL NO.	STOCK NO.	DESCRIPTION		REMARK
R610 R611	RS2522L RS2520L	680 470	1/2W Rf 1/2W Rf	
<b>[Switch]</b>				
SW601 SW602 SW101 SW102	SP0200 SP0200 SS0142 SS0012	SUL232A SUL232A SSR2640 2D SW343-1		EZ, EK
<b>[Trimmer capacitor]</b>				
TC201 TC202	CT0011 CT0011	TZ03R200, 3.2PF TZ03R200, 3.2PF		
<b>[Coil]</b>				
T101 T102 T103	LA1457 LA1209 LA1209	FM trans former Low pass filter Low pass filter		
<b>[Terminal]</b>				
T104 T601  T602 T603	AT0139 AT0140 AT0142 AT0140 AT0140	ANT. RCA, 4P 2P RCA, 4P RCA, 4P		SD
<b>[Trimming potentiometer, crystal]</b>				
VR101 VR102 VR103 VR104 VR201 X101	RT0052 RT0086 RT0025 RT0087 RT0055 TX5004	20K (B) 10K (B) 4.7K (B) 200K 1K (B) Crystal, 4.5MHz		

SYMBOL NO.	STOCK NO.	DESCRIPTION		REMARK
<b>[Capacitor]</b>				
C301	CE1753	4.7μ	50V	
C302	CE1717	10μ	16V	
<b>[Diode, IC]</b>				
D301	TD0231	LED AR2222S-B1		
D302	TD0231	LED AR2222S-B1		
D303	TD0231	LED AR2222S-B1		
D304	TD0231	LED AR2222S-B1		
D305	TD0231	LED AR2222S-B1		
D306	TD0231	LED AR2222S-B1		
D307	TD0230	LED PG2222SY-B1		
D308	TD0231	LED AR2222S-B1		
Q301	TC0196	IC BA6125		
<b>[Resistor]</b>				
R301	RB0362T	390		
R302	RB0404T	22K		
R303	RB0396T	10K		

PB-1381

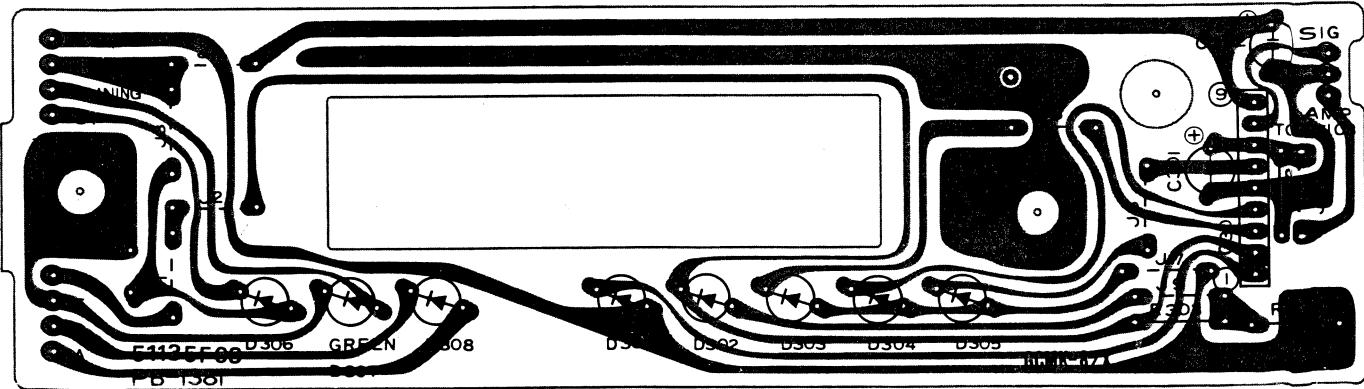


## PB-1382


SYMBOL NO.	STOCK NO.	DESCRIPTION			REMARK
[Capacitor]					
C401	CE1717T	10 $\mu$	16V	El	
C402	CQ0009T	0.047 $\mu$	50V	My	
C403	CE1718T	22 $\mu$	16V	El	
C404	CE1717T	10 $\mu$	16V	El	
C405	CE1750T	1 $\mu$	50V	El	
C406	CK0260T	0.022 $\mu$	25V	Ce	
C407	CQ1415	390P	50V	St	
C408	CQ1415	390P	50V	St	
C409	CK0255T	0.001 $\mu$	50V	Ce	
C410	CK0157T	0.04 $\mu$	50V	Ce	
C411	CK0260T	0.022 $\mu$	25V	Ce	
C412	CE1749T	47 $\mu$	50V	El	
C413	CE1717T	10 $\mu$	16V	El	
C412	CE1749T	47 $\mu$	50V	El	
C413	CE1717T	10 $\mu$	16V	El	
[Diode, transistor, IC]					
D403	TD0018	Di, 1K188FM-1			
D404	TD0018	Di, 1K188FM-1			
Q401	TC5027	IC TC4016BP			
Q402	TR0354	TR 2SC2021R			
Q403	TR0354	TR 2SC2021R			
Q404	TR0354	TR 2SC2021R			
Q405	TR0356	TR 2SA937R			
Q406	TR0354	TR 2SC2021R			
Q407	TR0356	TR 2SA937R			
Q408	TR0356	TR 2SA937R			
Q409	TR0354	TR 2SC2021R			
Q410	TR0354	TR 2SC2021R			
Q411	TR0354	TR 2SC2021R			
[Resistor]					
R401	RB0396T	10K			
R402	RB0396T	10K			
R403	RB0396T	10K			
R404	TB0356T	220			
R405	RB0384T	3.3K			
R406	RB0420T	100K			
R407	RB0420T	100K			
R408	RB0396T	10K			
R409	RB0412T	47K			
R410	RB0430T	270K			
R411	RB0424T	150K			
R412	RB0396T	10K			
R413	RB0412T	47K			
R414	RB0372T	1K			
R415	RB0404T	22K			
R416	RB0404T	22K			
R417	RB0380T	2.2K			
R418	RB0378T	1.8K			
R419	RB0394T	8.2K			
R420	RB0384T	3.3K			
R421	RB0372T	1K			
R422	RB0420T	100K			
R423	RB0396T	10K			
R424	RB0388T	4.7K			
R425	RB0412T	47K			

SYMBOL NO.	STOCK NO.	DESCRIPTION	REMARK
R426	RB0404T	22K	
R427	RB0412T	47K	
R428	RB0404T	22K	
R429	RB0412T	47K	
R430	RB0404T	22K	
R431	RB0374T	1,2K	
R432	RB0396T	10K	
R433	RB0404T	22K	
R434	RB0396T	10K	
R435	RB0396T	10K	
R437	RB0412T		
[Switch, coil]			
SW401	SP0199	SUN191A	
T401	LA1192	Anti-bardi filter	

## PB-1382

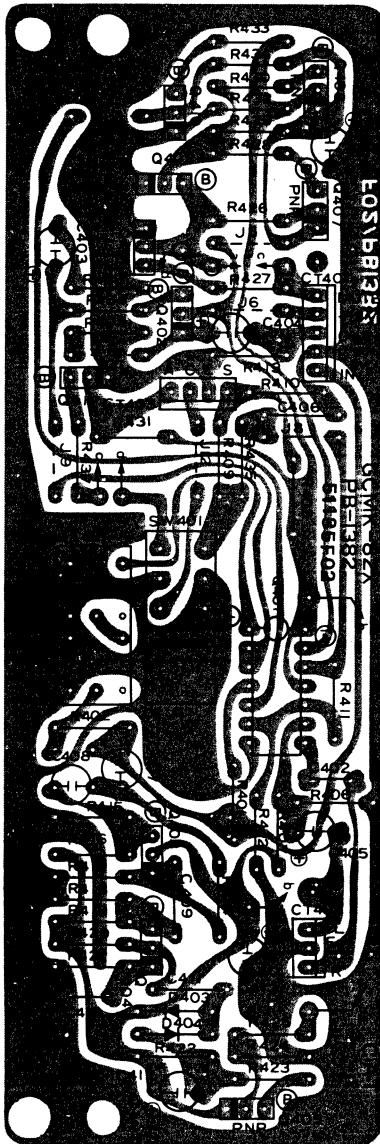


## R-5045 AUDIO SECTION

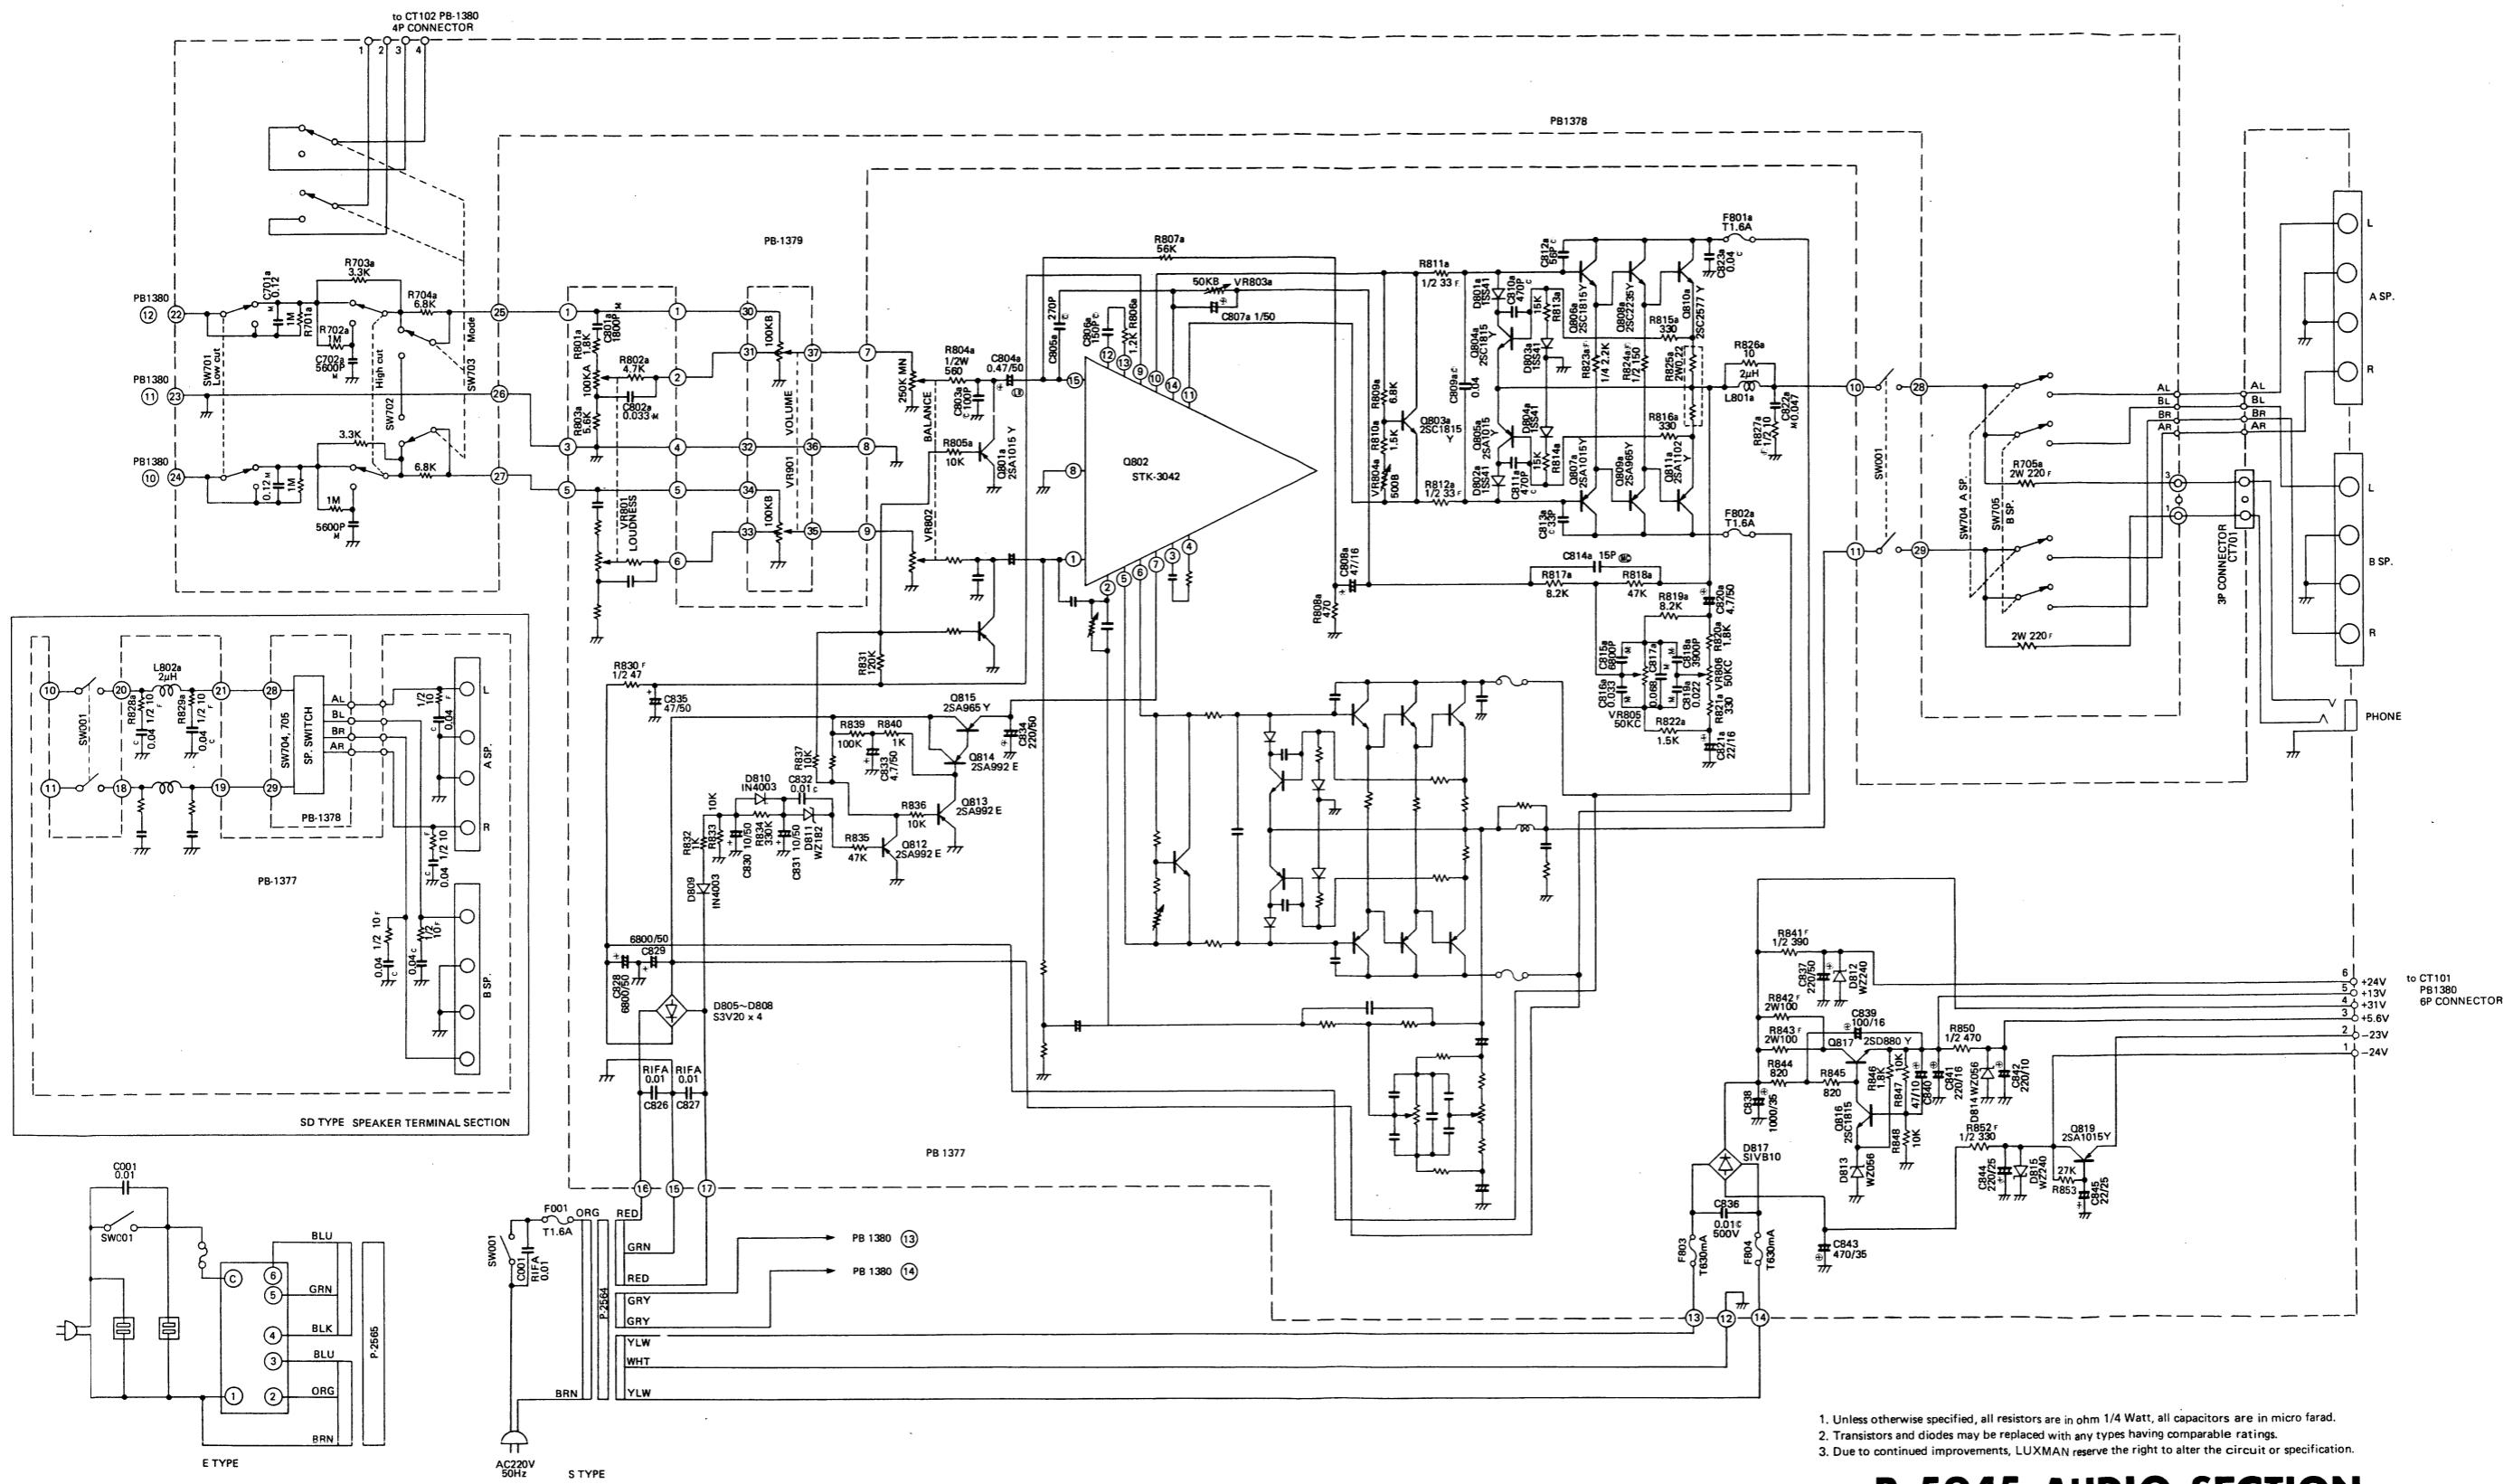

## R-5045 AUDIO SECTION

# R-5045 RF, EQ SECTION

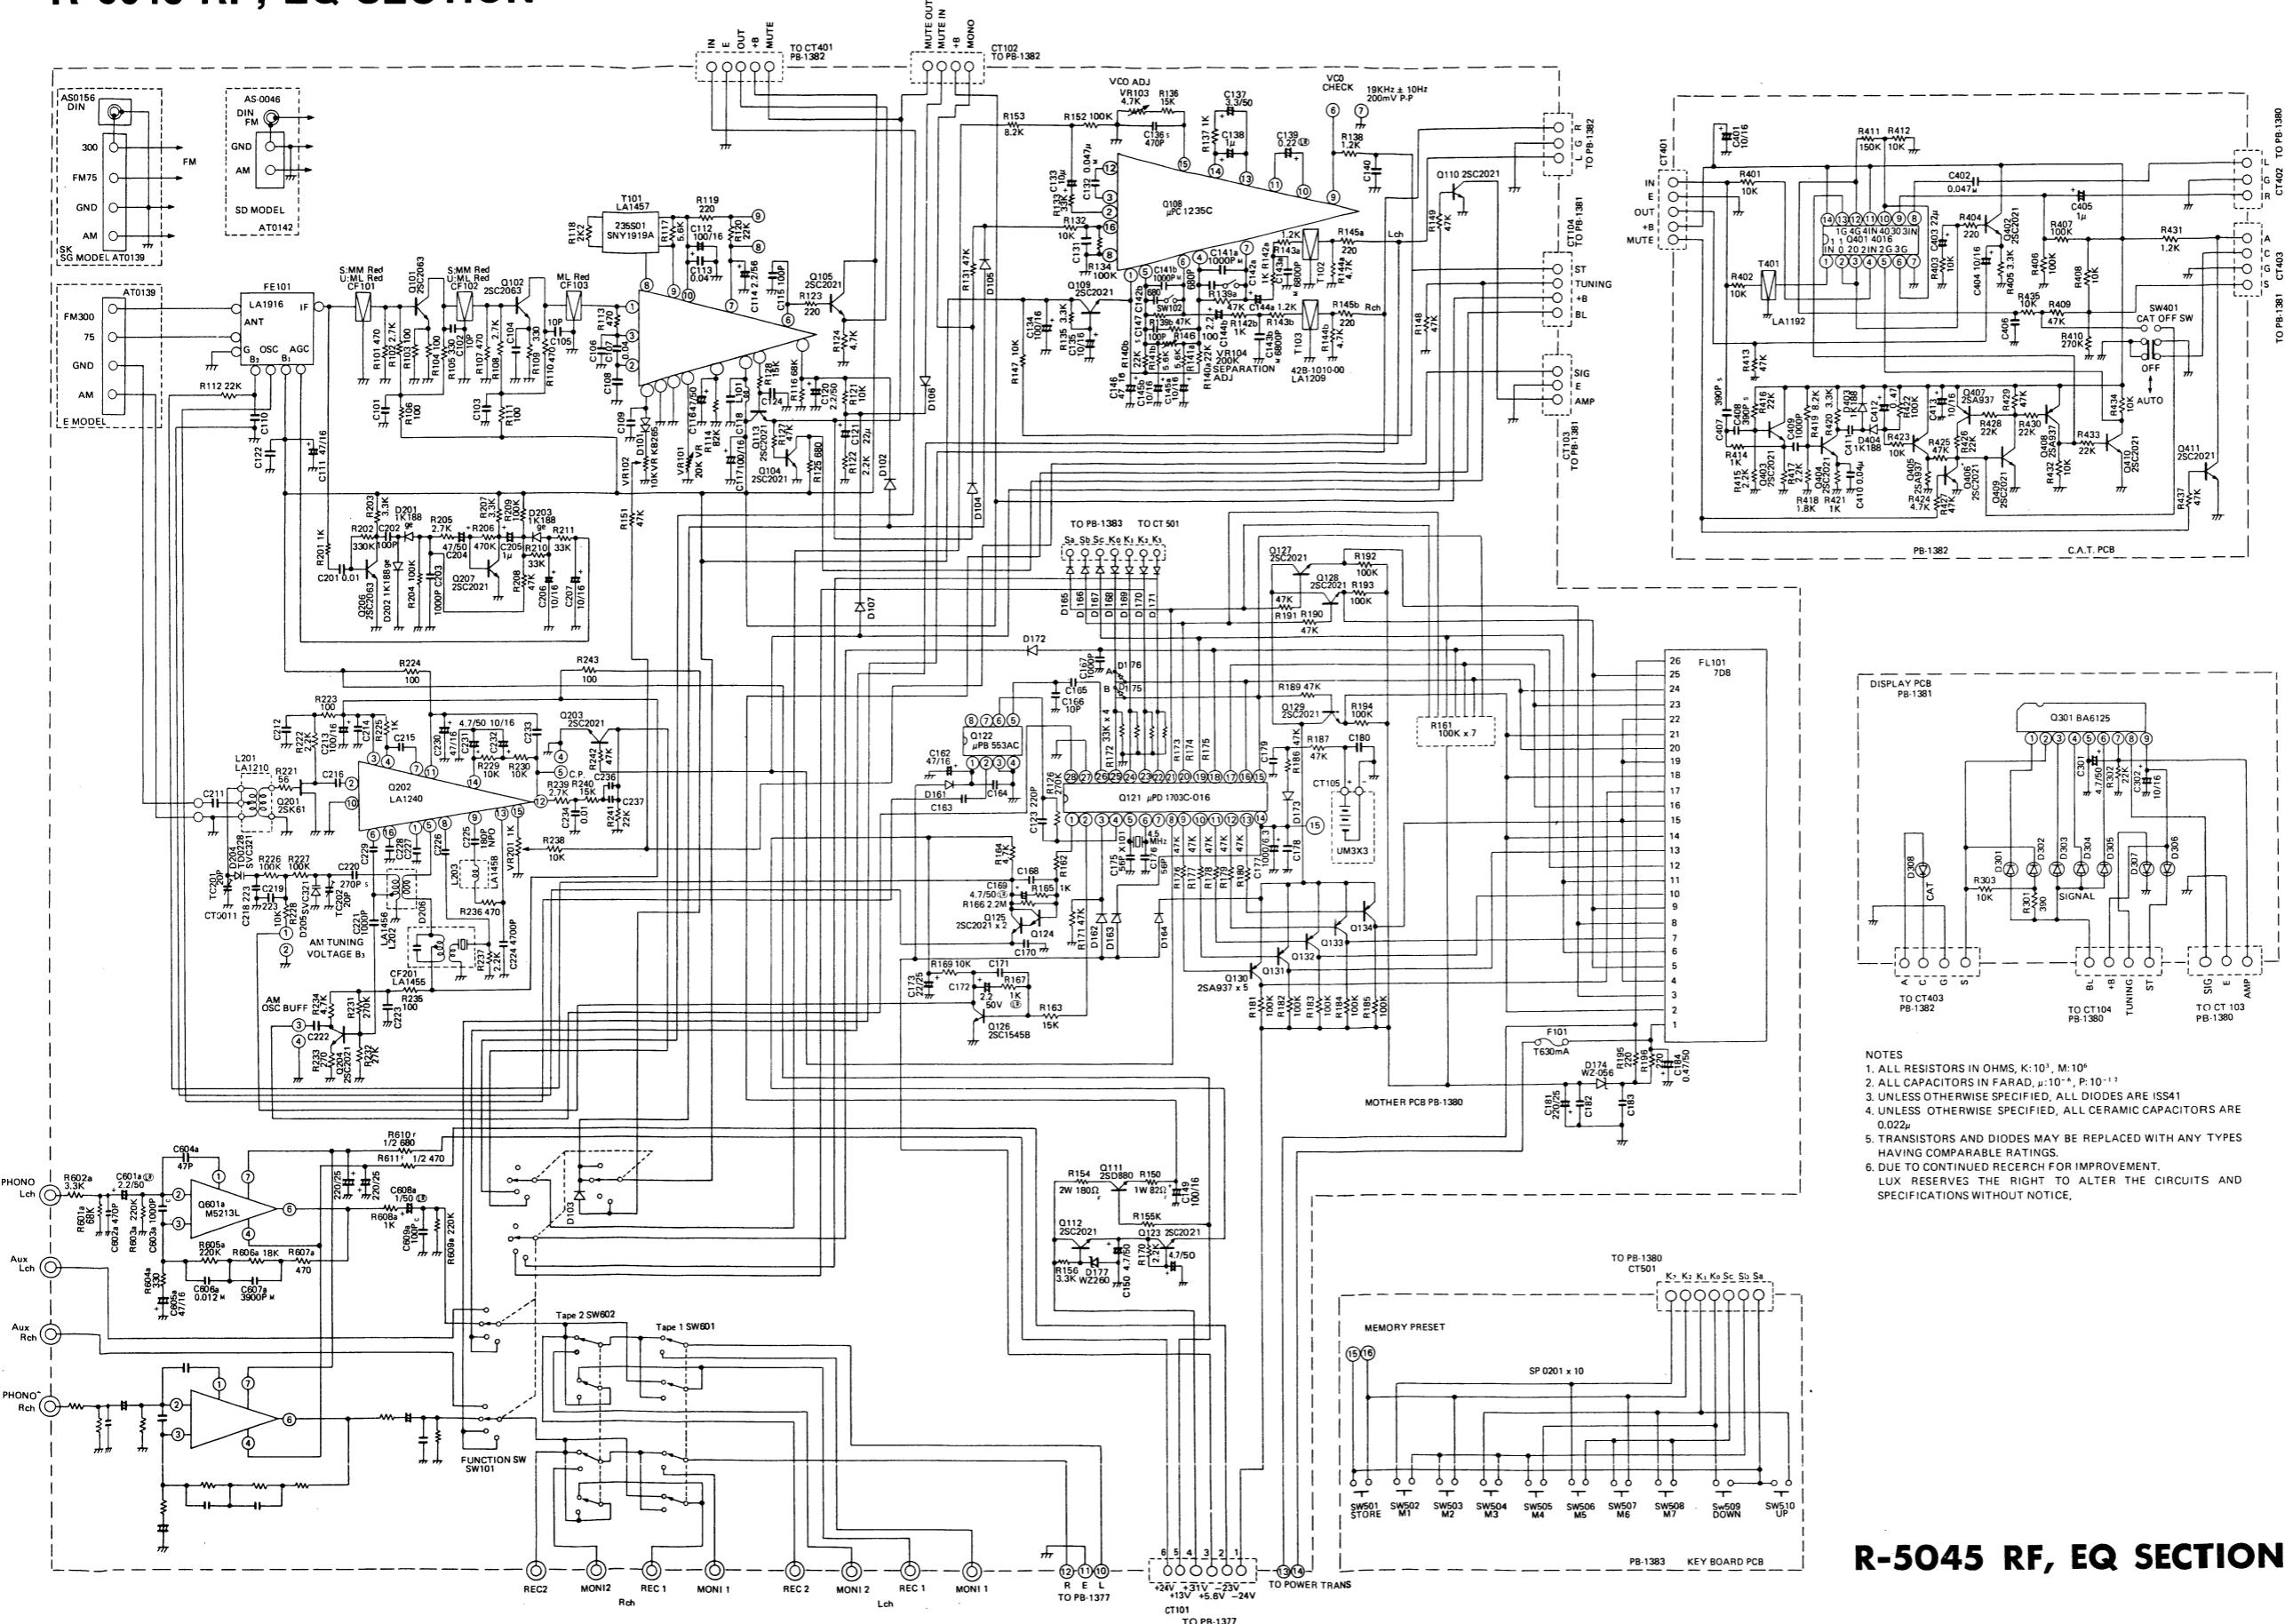

R-5045 RF, EQ SECTION

# Specification

## <FM SECTION> (IEEE/IHF Standard)

	[MONO]	[STEREO]
Usable Sensitivity:	10.3dBf (1.8 $\mu$ V)	
50dB Quieting Sensitivity:	15.6dBf (3.3 $\mu$ V)	
Signal-to-Noise Ratio at 65dBf:	76dB	
Frequency Response:	30Hz - 15KHz (-1dB)	
Distortion at 65dBf:	0.12%	0.3%
100Hz		
1kHz	0.15%	0.3%
6kHz	0.2%	0.4%
Capture Ratio at 65dBf:	1.4dB	
Adjacent Channel Selectivity:	10dB	
Alternate Channel Selectivity $\pm$ 400kHz:	75dB	
Spurious Response Ratio:	85dB	
IF Response Ratio:	85dB	
Image Response Ratio:	70dB	
AM Suppression Ratio:	56dB	
Stereo Separation:	56dB	40dB
100Hz		
1kHz		45dB
10kHz		39dB
Subcarrier Product Ratio:	62dB	
SCA Rejection Ratio:	60dB	
Muting Threshold:	10 $\mu$ V - 300mV (variable)	
Output Level:	800mV	

## <AM SECTION>

Usable Sensitivity at 1MHz, 400Hz 30% mod.:	200 $\mu$ V/m
Image Response Ratio at 1MHz:	50dB
IF Response Ratio at 1MHz:	40dB
Signal-to-Noise Ratio at 1MHz, 10 m V/m, 400Hz 30% mod.:	50dB
Distortion at 1MHz, 10m V/m, 400Hz/30% mod.:	0.5%

## <GENERAL>

Power Consumption:	10W
Dimensions:	438 (W) x 312 (D) x 85 (H) mm (17-1/4" x 12-9/32" x 3-11/32")
Weight:	Net 5kgs (11.0 lbs.) Gross 6kgs (13.2 lbs.)

Specifications and appearance design subject to change without notice.